

Fox Number	Bearing Number	Original Reference
<b>AVAILABLE BEARINGS FOR MERCEDES APPLICATIONS</b>		
FX 1380/1328	1380/1328	000 981 5402/000 980 5002 000 980 5402/000 980 5502 124 981 0305
FX 16015 C3	16015 C3	
FX 16016 C3	16016 C3	
FX 200216	200216	
FX 212049/212010	212049/212010	
FX 218248/218210	218248/218210	
FX 25590/25520	25590/25520	
FX 2789/2720	2789/2720	002 981 2705/000 980 1402 002 981 2805
FX 30203	30203	003 981 5405/001 980 2602
FX 30204	30204	006 981 4205/001 981 3705
FX 30205	30205	001 981 9705/000 981 8905
FX 30205 A	30205 A	
FX 30206	30206	012 981 9705
FX 30209	30209	631 981 0005/631 981 0005
FX 30214	30214	002 981 5405/003 981 5105
FX 30216	30216	000 981 0205/001 981 8505
FX 30218	30218	
FX 30219	30219	
FX 30220	30220	004 981 2105/004 981 4905
FX 30221 A	30221 A	
FX 30222	30222	
FX 30302	30302	
FX 30306	30306	

Fox Number	Bearing Number	Original Reference
<b>AVAILABLE BEARINGS FOR MERCEDES APPLICATIONS</b>		
FX 30308	30308	
FX 30309	30309	000 981 4105
FX 30310	30310	
FX 30311	30311	
FX 30312	30312	000 981 7205/000 981 9405 006 981 0605
FX 30313	30313	
FX 30314	30314	001 981 7705/001 981 7505
FX 30314 A	30314 A	
FX 30315	30315	
FX 30315 A	30315 A	
FX 30316	30316	
FX 30317	30317	
FX 30318	30318	
FX 31309	31309	
FX 31310	31310	
FX 31312 L	31312 L	
FX 31313	31313	
FX 31313 A	31313 A	
FX 31314	31314	
FX 32011 X	32011 X	000 981 9002/002 981 1305 002 981 6605/0006 981 5605
FX 32012 X	32012 X	007 981 1405
FX 32014 X	32014 X	000720 032014/005 981 6605 005 981 9505/005 981 9805
FX 32016 X	32016 X	007 981 9405/000720 032016 007 981 9005

Fox Number	Bearing Number	Original Reference
<b>AVAILABLE BEARINGS FOR MERCEDES APPLICATIONS</b>		
FX 32017 X	32017 X	015 981 0805/015 981 0005 005 981 1505/005 981 1405
FX 32018 X	32018 X	000720 032018/004 981 1705 005 981 5605/004 981 4305 006 981 0005
FX 32019 X	32019 X	000 981 2205/002 981 1705 002 981 1805/327 981 0405 327 981 2205
FX 32020 X	32020 X	006 981 0405/001 981 6405 001 981 7205/004 981 7405
FX 32021 X	32021 X	009 981 9401/003 981 2505 003 981 2705
FX 32024	32024	
FX 32205	32205	
FX 32206	32206	001 981 1505/001 981 6105 007 981 7605
FX 32207	32207	319 981 0005
FX 32210	32210	000 981 3605/001 981 8905 002 981 1905/002 981 2205 005 981 5305/319 981 0405
FX 32211	32211	000 981 3305/000 981 9005 001 981 8405/001 981 8605 002 981 2405/319 981 0205
FX 32212	32212	
FX 32213	32213	000 981 9505/001 981 8305
FX 32214	32214	004 981 7305
FX 32215	32215	000 981 7405/000 981 8405 001 981 4805/327 981 0305
FX 32216	32216	001 981 8705/006 981 5905 001 981 9505/312 981 0501 000 980 9602/002 981 9005

Fox Number	Bearing Number	Original Reference
<b>AVAILABLE BEARINGS FOR MERCEDES APPLICATIONS</b>		
FX 32217	32217	000 981 9605/001 981 5605 001 981 7005/003 981 6405 006 981 0705
FX 32218	32218	
FX 32219	32219	000 981 2105
FX 32220	32220	
FX 32221	32221	
FX 32222	32222	
FX 32304	32304	001 981 9005/002 981 2005 319 981 0605
FX 32305	32305	
FX 32306	32306	003 981 8605/002 981 8405 001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 32307	32307	000 980 9702/003 981 2605 003 981 2805/005 981 4905 000 980 7502/002 981 8205
FX 32309	32309	004 981 1305
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32311	32311	010 981 9305/006 981 7405 006 981 6905/006 981 0805
FX 32312	32312	015 981 7505/011 981 6905 011 981 6805
FX 32314	32314	004 981 9805/012 981 3205 004 981 9905/005 981 0005
FX 32314 B	32314 B	

Fox Number	Bearing Number	Original Reference
<b>AVAILABLE BEARINGS FOR MERCEDES APPLICATIONS</b>		
FX 33011	33011	002 981 9305/003 981 4305 005 981 4405/007 981 5705 009 981 9305
FX 33014	33014	005 981 6905
FX 33015	33015	
FX 33017	33017	006 981 8705/006 981 9705 007 981 4905
FX 33019	33019	006 981 8205/008 981 3605 000 981 8302
FX 33020	33020	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 33021	33021	003 981 3905/003 981 7205 004 981 6805/006 981 6205
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105
FX 33109	33109	003 981 1105/003 981 1605 003 981 9605
FX 33111	33111	008 981 7505 003 981 5305/003 981 5705 004 981 7205/005 981 4105
FX 33112	33112	008 981 9505
FX 33113	33113	008 981 8305/008 981 8405
FX 33114	33114	
FX 33115	33115	003 981 3205
FX 33116	33116	017 981 4905/012 981 4105 012 981 4005
FX 33117	33117	004 981 6405/004 981 6505 004 981 6705/006 981 6005
FX 33118	33118	

Fox Number	Bearing Number	Original Reference
<b>AVAILABLE BEARINGS FOR MERCEDES APPLICATIONS</b>		
FX 33205	33205	140 981 0005/003 981 1005 003 981 1505/003 981 9505 005 981 2205
FX 33208	33208	006 981 6305/001 980 0902 003 981 3705/003 981 7405 003 981 5205/003 981 5605
FX 33209	33209	003 981 8505/004 981 7305 006 981 5205/001 980 1002
FX 33210	33210	005 981 4005/002 981 7905 003 981 8305/004 981 4205
FX 33211	33211	002 981 8605/002 981 8905 001 980 2702
FX 33212	33212	
FX 33213	33213	000 981 5605/002 981 0005 000 981 6105/001 981 1405
FX 33214	33214	004 981 4605/004 981 4705 004 981 4805 008 981 5305/003 981 4705
FX 33215	33215	000 981 5705/002 981 1605
FX 33216	33216	000 981 0305/000 981 2401 000 981 7205/000 981 9405 006 981 0605
FX 33217	33217	007 981 7005/011 981 0805
FX 33220	33220	003 981 4505/004 981 1005 008 981 3405
FX 3382/3320	3382/3320	
FX 3382/3380	3382/3380	
FX 33885/33822	33885/33822	
FX 33889/33822	33889/33822	
FX 33895/33820	33895/33820	002 981 0505/000 980 6802 001 981 0505/001 981 3805

Fox Number	Bearing Number	Original Reference
<b>AVAILABLE BEARINGS FOR MERCEDES APPLICATIONS</b>		
FX 33895/33822	33895/33822	002 981 0505/000 980 6802 001 981 0505/001 981 3805
FX 3984/3920	3984/3920	001 981 0405/001 981 3905 002 981 0605
FX 45 BC/46	45 BC/46	
FX 45 BC/47	45 BC/47	
FX 47487/47420 A	47487/47420 A	
FX 47490/47420	47490/47420	000 980 7202/000 980 7402 002 981 9202
FX 48487/4842	48487/4842	
FX 497/492 A	497/492 A	
FX 498/492 A	498/492 A	
FX 509043	509043 (STEEL CAGE/FIBRE CAGE)	
FX 510148	510148	
FX 512533	512533	
FX 5223820	5223820	
FX 524033	524033	312 410 0051/352 410 0051 322 410 0051
FX 524213	524213	
FX 524599	524599	
FX 524850	524850	
FX 524851	524851	
FX 528548 E1/B1	528548 E1/B1	
FX 528946	528946	003 981 6805/004 981 0305 004 981 0605
FX 528983 B	528983 B	004 981 2405/004 981 2305 004 981 3905

Fox Number	Bearing Number	Original Reference
<b>AVAILABLE BEARINGS FOR MERCEDES APPLICATIONS</b>		
FX 529084 D	529084 D	
FX 529257 A	529257 A	363 410 0151
FX 534565	534565	005 981 3005/005 981 3105 005 981 8805
FX 537/532	537/532	
FX 538971	538971	
FX 559/552 A	559/552 A	
FX 565 S/562 X	565 S/562 X	
FX 580/572	580/572	000 981 7905/001 981 4505
FX 598/592 A	598/592 A	
FX 598 A/593 X	598 A/593 X	
FX 6205 2RS	6205 2RS	
FX 6208 N	6208 N	
FX 6211 2RS	6211 2RS	
FX 6212 2RS	6212 2RS	
FX 6213 NC3	6213 NC3	
FX 6214	6214	
FX 6216	6216	
FX 62201 2RS	62201 2RS	
FX 62305 2RS	62305 2RS	
FX 6305 2RS	6305 2RS	
FX 6306	6306	
FX 6311	6311	
FX 6312	6312	
FX 6313	6313	



Fox Number	Bearing Number	Original Reference
<b>AVAILABLE BEARINGS FOR MERCEDES APPLICATIONS</b>		
FX 6314 NC3	6314 NC3	
FX 636/653	636/653	
FX 6386/6320	6386/6320	
FX 641/632	641/632	
FX 65225/65500	65225/65500	
FX 665/653	665/653	
FX 683/672	683/672	
FX 77376/77675	77376/77675	
FX HM 204010/204043	HM 204010/204043	
FX HM 220149/220110	HM 220149/220110	
FX HM 516449/410	HM 516449/HM 516410	
FX HM 518445/410	HM 518445/HM 518410	
FX HM 807046/010	HM 807046/HM807010	
FX HM 911244/216	HM 911244/HM 911216	
FX JH 415647/JH 415610	JH 415647/JH 415610	
FX JM 714249/210	JM 714249/JM 714210	
FX NUP 208 E	NUP 208 E	
FX NUP 308	NUP 308	
FX NU/NUP 309	NU/NUP 309	
FX NU 310	NU 310	
FX NUP 311	NUP 311	
FX NUP 314 EN	NUP 314 EN	
FX T 126	T 126	
FX T 138	T 138	
FX T 144	T 144	

Fox Number	Bearing Number	Original Reference
<b>AVAILABLE BEARINGS FOR MERCEDES APPLICATIONS</b>		
FX T 152	T 152	
FX QJ 208	QJ 208	
FX QJ 209	QJ 209	
FX QJ 212	QJ 212	
FX QJ 309	QJ 309	

Fox Number	Bearing Number	Original Reference
<b>SERIES 1000</b>		<b>AXLE</b>
FX 32306	32306	000 981 9505/001 981 8305 001 981 8705/006 981 5905 001 981 9505/312 981 0501
FX 33208	33208	003 981 3905/003 981 7205 004 981 6805/006 981 6205 008 981 7505
FX 33111	33111	000 980 7502/002 981 8205 006 981 8205/008 981 3605 000 981 8302
FX 33213	33213	006 981 6305/001 980 0902 003 981 3705/003 981 7405
FX 32019 X	32019 X	003 981 5405/001 980 2602 002 981 5405/003 981 5105 006 981 4705
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
FX 32216	32216	000 981 0305/000 981 2401 000 981 7205/000 981 9405 006 981 0605
FX 32217	32217	000 981 2205/002 981 1705 002 981 1805/327 981 0405 327 981 2205
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 580/572	580/572	000 981 5605/002 981 0005 004 981 4605/004 981 4705 004 981 4805
FX JM 714249/210	JM 714249/JM 714210	008 981 5305/003 981 4705

Fox Number	Bearing Number	Original Reference
------------	----------------	--------------------

<b>SERIES 1100</b>		<b>AXLE</b>
FX 32306	32306	000 981 9505/001 981 8305 001 981 8705/006 981 5905 001 981 9505/312 981 0501
FX 33208	33208	003 981 3905/003 981 7205 004 981 6805/006 981 6205 008 981 7505
FX 33209	33209	003 981 5305/003 981 5705 004 981 7205/005 981 4105
FX 33211	33211	004 981 6405/004 981 6505 004 981 6705/006 981 6005
FX 33213	33213	006 981 6305/001 980 0902 003 981 3705/003 981 7405
FX 33214	33214	003 981 5205/003 981 5605 003 981 8505/004 981 7305 006 981 5205/001 980 1002
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702

<b>SERIES 1100</b>		<b>AXLE</b>
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 32216	32216	000 981 0305/000 981 2401 000 981 7205/000 981 9405 006 981 0605
FX 32217	32217	000 981 2205/002 981 1705 002 981 1805/327 981 0405 327 981 2205
FX 580/572	580/572	000 981 5605/002 981 0005 004 981 4605/004 981 4705 004 981 4805

Fox Number	Bearing Number	Original Reference
<b>SERIES 1111</b>		<b>GEAR CASE</b>
FX 30308	30308	
FX 30309	30309	006 981 4205/001 981 3705
<b>SERIES 1111</b>		<b>AXLE</b>
FX 32307	32307	000 981 9605/001 981 5605 001 981 7005/003 981 6405 006 981 0705
FX 30312	30312	001 981 9705/000 981 8905 012 981 9705
FX 497/492 A	497/492 A	000 981 6105/001 981 1405
FX 32213	32213	000 981 4105
FX 32216	32216	000 981 0305/000 981 2401 000 981 7205/000 981 9405 006 981 0605
<b>SERIES 1111</b>		<b>DIFFERENTIAL</b>
FX 32213	32213	000 981 4105
FX HM 911244/216	HM 911244/HM 911216	
FX T 126	T 126	
FX T 138	T 138	
FX 32213	32213	000 981 4105
FX HM 911244/216	HM 911244/HM 911216	
<b>SERIES 1111</b>		<b>ENGINE</b>
FX 30302	30302	
<b>SERIES 1113-1114-1115-1116-1118</b>		<b>GEAR CASE</b>
FX 30308	30308	
FX 30309	30309	006 981 4205/001 981 3705

Fox Number	Bearing Number	Original Reference
<b>SERIES 1113-1114-1115-1116-1118</b>		<b>STEERING</b>
FX 30205	30205	
FX 30206	30206	
<b>SERIES 1113-1114-1115-1116-1118</b>		<b>AXLE</b>
FX T 126	T 126	
FX T 138	T 138	
FX 30214	30214	
FX 32307	32307	000 981 9605/001 981 5605 001 981 7005/003 981 6405 006 981 0705
FX 33208	33208	003 981 3905/003 981 7205 004 981 6805/006 981 6205 008 981 7505
FX 30312	30312	001 981 9705/000 981 8905 012 981 9705
FX 33213	33213	006 981 6305/001 980 0902 003 981 3705/003 981 7405
FX 497/492 A	497/492 A	000 981 6105/001 981 1405
FX 32213	32213	000 981 4105
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
FX 32216	32216	000 981 0305/000 981 2401 000 981 7205/000 981 9405 006 981 0605
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
<b>SERIES 1113-1114-1115-1116-1118</b>		<b>DIFFERENTIAL</b>
FX 32213	32213	000 981 4105
FX 33111	33111	000 980 7502/002 981 8205 006 981 8205/008 981 3605 000 981 8302

Fox Number	Bearing Number	Original Reference
<b>SERIES 1113-1114-1115-1116-1118</b>		<b>DIFFERENTIAL</b>
FX 47487/47420 A	47487/47420 A	000 981 5705/002 981 1605
FX HM 911244/216	HM 911244/HM 911216	
<b>SERIES 1113-1114-1115-1116-1118</b>		<b>ENGINE</b>
FX 30203	30203	
FX 30204	30204	
<b>SERIES 1200</b>		<b>AXLE</b>
FX 33208	33208	003 981 3905/003 981 7205 004 981 6805/006 981 6205 008 981 7505
FX 33209	33209	003 981 5305/003 981 5705 004 981 7205/005 981 4105
FX 33210	33210	005 981 4005/002 981 7905 003 981 8305/004 981 4205
FX 33213	33213	006 981 6305/001 980 0902 003 981 3705/003 981 7405
FX 33214	33214	003 981 5205/003 981 5605 003 981 8505/004 981 7305 006 981 5205/001 980 1002
FX 30220	30220	004 981 2105/004 981 4905
FX 32019 X	32019 X	003 981 5405/001 980 2602 002 981 5405/003 981 5105 006 981 4705
FX 32215	32215	000 981 7405/000 981 8405 001 981 4805/327 981 0305
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905

Fox Number	Bearing Number	Original Reference
<b>SERIES 1200</b>		<b>AXLE</b>
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
FX 32217	32217	000 981 2205/002 981 1705 002 981 1805/327 981 0405 327 981 2205
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 580/572	580/572	000 981 5605/002 981 0005 004 981 4605/004 981 4705 004 981 4805
FX 598/592 A	598/592 A	000 981 7905/001 981 4505

<b>SERIES 1214-1215-1217-1218</b>		<b>GEAR CASE</b>
FX 30308	30308	
FX 2789/2720	2789/2720	002 981 2705/000 980 1402 002 981 2805
FX 3382/3380	3382/3380	

<b>SERIES 1214-1215-1217-1218</b>		<b>AXLE</b>
FX 33208	33208	003 981 3905/003 981 7205 004 981 6805/006 981 6205 008 981 7505
FX 33213	33213	006 981 6305/001 980 0902 003 981 3705/003 981 7405



Fox Number	Bearing Number	Original Reference
<b>SERIES 1214-1215-1217-1218</b>		<b>AXLE</b>
FX 32213	32213	000 981 4105
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
FX 33216	33216	000 981 0305/000 981 2401 000 981 7205/000 981 9405 006 981 0605
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
<b>SERIES 1214-1215-1217-1218</b>		<b>DIFFERENTIAL</b>
FX 47487/47420 A	47487/47420 A	000 981 5705/002 981 1605
FX HM 911244/216	HM 911244/HM 911216	
<b>SERIES 1214-1215-1217-1218</b>		<b>ENGINE</b>
FX 30203	30203	
FX 30204	30204	
<b>SERIES 1300</b>		<b>AXLE</b>
FX 32019 X	32019 X	003 981 5405/001 980 2602 002 981 5405/003 981 5105 006 981 4705
FX 32306	32306	000 981 9505/001 981 8305 001 981 8705/006 981 5905 001 981 9505/312 981 0501
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 33208	33208	003 981 3905/003 981 7205 004 981 6805/006 981 6205 008 981 7505
FX 33209	33209	003 981 5305/003 981 5705 004 981 7205/005 981 4105

Fox Number	Bearing Number	Original Reference
<b>SERIES 1300</b>		<b>AXLE</b>
FX 33211	33211	004 981 6405/004 981 6505 004 981 6705/006 981 6005
FX 33213	33213	006 981 6305/001 980 0902 003 981 3705/003 981 7405
FX 33214	33214	003 981 5205/003 981 5605 003 981 8505/004 981 7305 006 981 5205/001 980 1002
FX 32011 X	32011 X	000 981 9002/002 981 1305 002 981 6605/0006 981 5605 007 981 0405
FX 32215	32215	000 981 7405/000 981 8405 001 981 4805/327 981 0305
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
FX 32014 X	32014 X	000720 032014/005 981 6605 005 981 9505/005 981 9805
FX 32217	32217	000 981 2205/002 981 1705 002 981 1805/327 981 0405 327 981 2205
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 598/592 A	598/592 A	000 981 7905/001 981 4505

<b>SERIES 1313-1314-1315-1316-1317-1318-1319</b>		<b>GEAR CASE</b>
FX 30308	30308	
FX 30309	30309	006 981 4205/001 981 3705
FX 33011	33011	002 981 9305/003 981 4305 005 981 4405/007 981 5705 009 981 9305
FX 33112	33112	008 981 9505

Fox Number	Bearing Number	Original Reference
<b>SERIES 1313-1314-1315-1316-1317-1318-1319</b>		<b>GEAR CASE</b>
FX 33209	33209	003 981 5305/003 981 5705 004 981 7205/005 981 4105
FX 33210	33210	005 981 4005/002 981 7905 003 981 8305/004 981 4205
FX 33212	33212	
FX 2789/2720	2789/2720	002 981 2705/000 980 1402 002 981 2805
FX 3382/3320	3382/3320	
<b>SERIES 1313-1314-1315-1316-1317-1318-1319</b>		<b>AXLE</b>
FX T 144	T 144	
FX T 152	T 152	
FX 30214	30214	
FX 32307	32307	000 981 9605/001 981 5605 001 981 7005/003 981 6405 006 981 0705
FX 33208	33208	003 981 3905/003 981 7205 004 981 6805/006 981 6205 008 981 7505
FX 33209	33209	003 981 5305/003 981 5705 004 981 7205/005 981 4105
FX 33015	33015	
FX 33213	33213	006 981 6305/001 980 0902
FX 33214	33214	003 981 5205/003 981 5605 003 981 8505/004 981 7305 006 981 5205/001 980 1002
FX 497/492 A	497/492 A	000 981 6105/001 981 1405
FX 559/552 A	559/552 A	
FX 565 S/562 X	565 S/562 X	
FX 33114	33114	

Fox Number	Bearing Number	Original Reference
<b>SERIES 1313-1314-1315-1316-1317-1318-1319</b>		<b>AXLE</b>
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 598 A/593 X	598 A/593 X	
<b>SERIES 1313-1314-1315-1316-1317-1318-1319</b>		<b>DIFFERENTIAL</b>
FX 47487/47420 A	47487/47420 A	000 981 5705/002 981 1605
FX HM 911244/216	HM 911244/HM 911216	
FX 32018 X	32018 X	000720 032018/004 981 1705 005 981 5605/004 981 4305 006 981 0005
FX 32020 X	32020 X	006 981 0405/001 981 6405 001 981 7205/004 981 7405
<b>SERIES 1313-1314-1315-1316-1317-1318-1319</b>		<b>ENGINE</b>
FX 30203	30203	
FX 30204	30204	
FX 30205	30205	

<b>SERIES 1400</b>		<b>AXLE</b>
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 33208	33208	003 981 3905/003 981 7205 004 981 6805/006 981 6205 008 981 7505

Fox Number	Bearing Number	Original Reference
<b>SERIES 1400</b>		<b>AXLE</b>
FX 33209	33209	003 981 5305/003 981 5705 004 981 7205/005 981 4105
FX 33210	33210	005 981 4005/002 981 7905 003 981 8305/004 981 4205
FX 32314 B	32314 B	
FX 33213	33213	006 981 6305/001 980 0902 003 981 3705/003 981 7405
FX 33214	33214	003 981 5205/003 981 5605 003 981 8505/004 981 7305 006 981 5205/001 980 1002
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
FX 32019 X	32019 X	003 981 5405/001 980 2602 002 981 5405/003 981 5105 006 981 4705
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 32217	32217	000 981 2205/002 981 1705 002 981 1805/327 981 0405 327 981 2205
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
<b>SERIES 1414-1417-1418-1419-1420-1421</b>		<b>GEAR CASE</b>
FX 30308	30308	
FX 30309	30309	006 981 4205/001 981 3705

Fox Number	Bearing Number	Original Reference
<b>SERIES 1414-1417-1418-1419-1420-1421</b>		<b>GEAR CASE</b>
FX 2789/2720	2789/2720	002 981 2705/000 980 1402 002 981 2805
FX 3382/3320	3382/3320	

<b>SERIES 1414-1417-1418-1419-1420-1421</b>		<b>AXLE</b>
FX T 144	T 144	
FX 32307	32307	000 981 9605/001 981 5605 001 981 7005/003 981 6405 006 981 0705
FX 33208	33208	003 981 3905/003 981 7205 004 981 6805/006 981 6205 008 981 7505
FX 33213	33213	006 981 6305/001 980 0902 003 981 3705/003 981 7405
FX 559/552 A	559/552 A	
FX 33114	33114	
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 598 A/593 X	598 A/593 X	

<b>SERIES 1414-1417-1418-1419-1420-1421</b>		<b>DIFFERENTIAL</b>
FX 32213	32213	000 981 4105
FX HM 911244/216	HM 911244/HM 911216	

Fox Number	Bearing Number	Original Reference
<b>SERIES 1414-1417-1418-1419-1420-1421</b>		<b>DIFFERENTIAL</b>
FX 32018 X	32018 X	000720 032018/004 981 1705 005 981 5605/004 981 4305 006 981 0005
FX 32020 X	32020 X	006 981 0405/001 981 6405 001 981 7205/004 981 7405
FX 47487/47420 A	47487/47420 A	000 981 5705/002 981 1605

<b>SERIES 1414-1417-1418-1419-1420-1421</b>		<b>ENGINE</b>
FX 30203	30203	
FX 30204	30204	
FX 30205	30205	

<b>SERIES 1500</b>		<b>AXLE</b>
FX 33209	33209	003 981 5305/003 981 5705 004 981 7205/005 981 4105
FX 33210	33210	005 981 4005/002 981 7905 003 981 8305/004 981 4205
FX 33214	33214	003 981 5205/003 981 5605 003 981 8505/004 981 7305 006 981 5205/001 980 1002
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105

Fox Number	Bearing Number	Original Reference
<b>SERIES 1513-1514-1516-1517-1518-1519-1520-1524-1525</b>		<b>GEAR CASE</b>
FX 30308	30308	
FX 33885/33822	33885/33822	
FX 33889/33822	33889/33822	

<b>SERIES 1513-1514-1516-1517-1518-1519-1520-1524-1525</b>		<b>AXLE</b>
FX T 144	T 144	
FX 32307	32307	000 981 9605/001 981 5605 001 981 7005/003 981 6405 006 981 0705
FX 32309	32309	004 981 1305
FX 33208	33208	003 981 3905/003 981 7205 004 981 6805/006 981 6205 008 981 7505
FX 30313	30313	
FX 559/552 A	559/552 A	
FX 565 S/562 X	565 S/562 X	
FX 497/492 A	497/492 A	000 981 6105/001 981 1405
FX 498/492 A	498/492 A	
FX 32216	32216	000 981 0305/000 981 2401 000 981 7205/000 981 9405 006 981 0605
FX 33114	33114	
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
FX 580/572	580/572	000 981 5605/002 981 0005 004 981 4605/004 981 4705 004 981 4805
FX 32218	32218	



Fox Number	Bearing Number	Original Reference
<b>SERIES 1513-1514-1516-1517-1518-1519-1520-1524-1525</b>		<b>AXLE</b>
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 598 A/593 X	598 A/593 X	

<b>SERIES 1513-1514-1516-1517-1518-1519-1520-1524-1525</b>		<b>DIFFERENTIAL</b>
FX 32018 X	32018 X	000720 032018/004 981 1705 005 981 5605/004 981 4305 006 981 0005
FX 32020 X	32020 X	006 981 0405/001 981 6405 001 981 7205/004 981 7405
FX 47487/47420 A	47487/47420 A	000 981 5705/002 981 1605
FX 65225/65500	65225/65500	
FX HM 807046/010	HM 807046/HM807010	
FX HM 911244/216	HM 911244/HM 911216	
FX 30203	30203	

<b>SERIES 1513-1514-1516-1517-1518-1519-1520-1524-1525</b>		<b>ENGINE</b>
FX 30204	30204	
FX 30205	30205	
FX 32205	32205	

<b>SERIES 1600</b>		<b>AXLE</b>
FX 32019 X	32019 X	003 981 5405/001 980 2602 002 981 5405/003 981 5105 006 981 4705
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905

Fox Number	Bearing Number	Original Reference
<b>SERIES 1600</b>		<b>AXLE</b>
FX 33209	33209	003 981 5305/003 981 5705 004 981 7205/005 981 4105
FX 33210	33210	005 981 4005/002 981 7905 003 981 8305/004 981 4205
FX 30314	30314	001 981 7705/001 981 7505
FX 32314 B	32314 B	
FX 33214	33214	003 981 5205/003 981 5605 003 981 8505/004 981 7305 006 981 5205/001 980 1002
FX 30220	30220	004 981 2105/004 981 4905
FX 33019	33019	000 980 9602/002 981 9005
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
FX 33220	33220	003 981 4505/004 981 1005 008 981 3405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105

<b>SERIES 1614-1615-1618-1620-1621-1622-1623-1625-1630-1632-1633</b>		<b>GEAR CASE</b>
FX 30308	30308	
FX 30309	30309	006 981 4205/001 981 3705
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905

Fox Number	Bearing Number	Original Reference
<b>SERIES 1614-1615-1618-1620-1621-1622-1623-1625-1630-1632-1633</b>		<b>GEAR CASE</b>
FX 33885/33822	33885/33822	
FX 33889/33822	33889/33822	
<b>SERIES 1614-1615-1618-1620-1621-1622-1623-1625-1630-1632-1633</b>		<b>STEERING</b>
FX 30205	30205	
FX 30206	30206	
<b>SERIES 1614-1615-1618-1620-1621-1622-1623-1625-1630-1632-1633</b>		<b>AXLE</b>
FX 33208	33208	003 981 3905/003 981 7205 004 981 6805/006 981 6205 008 981 7505
FX 33210	33210	005 981 4005/002 981 7905 003 981 8305/004 981 4205
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 33213	33213	006 981 6305/001 980 0902 003 981 3705/003 981 7405
FX 33214	33214	003 981 5205/003 981 5605 003 981 8505/004 981 7305 006 981 5205/001 980 1002
FX 32019 X	32019 X	003 981 5405/001 980 2602 002 981 5405/003 981 5105 006 981 4705
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105

Fox Number	Bearing Number	Original Reference
<b>SERIES 1614-1615-1618-1620-1621-1622-1623-1625-1630-1632-1633</b>		<b>AXLE</b>
FX 31313	31313	
FX 32018 X	32018 X	000720 032018/004 981 1705 005 981 5605/004 981 4305 006 981 0005
FX 32020 X	32020 X	006 981 0405/001 981 6405 001 981 7205/004 981 7405
FX 33115	33115	003 981 3205
FX 47487/47420 A	47487/47420 A	000 981 5705/002 981 1605
FX HM 911244/216	HM 911244/HM 911216	
<b>SERIES 1614-1615-1618-1620-1621-1622-1623-1625-1630-1632-1633</b>		<b>ENGINE</b>
FX 30203	30203	
FX 30204	30204	
<b>SERIES 1700</b>		<b>AXLE</b>
FX 32019 X	32019 X	003 981 5405/001 980 2602 002 981 5405/003 981 5105 006 981 4705
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32311	32311	010 981 9305/006 981 7405 006 981 6905/006 981 0805
FX 33210	33210	005 981 4005/002 981 7905 003 981 8305/004 981 4205
FX 32314 B	32314 B	
FX 33214	33214	003 981 5205/003 981 5605 003 981 8505/004 981 7305 006 981 5205/001 980 1002
FX JH 415647/JH 415610	JH 415647/JH 415610	
FX 30220	30220	004 981 2105/004 981 4905

Fox Number	Bearing Number	Original Reference
<b>SERIES 1700</b>		<b>AXLE</b>
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 33220	33220	003 981 4505/004 981 1005 008 981 3405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105

<b>SERIES 1714-1718-1720-1721-1723</b>		<b>GEAR CASE</b>
FX 30308	30308	
FX 32309	32309	004 981 1305

<b>SERIES 1714-1718-1720-1721-1723</b>		<b>AXLE</b>
FX 33210	33210	005 981 4005/002 981 7905
FX 33214	33214	003 981 5205/003 981 5605 003 981 8505/004 981 7305 006 981 5205/001 980 1002
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105

Fox Number	Bearing Number	Original Reference
<b>SERIES 1714-1718-1720-1721-1723</b>		<b>AXLE</b>
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
<b>SERIES 1714-1718-1720-1721-1723</b>		<b>DIFFERENTIAL</b>
FX 32018 X	32018 X	000720 032018/004 981 1705 005 981 5605/004 981 4305 006 981 0005
FX 32020 X	32020 X	006 981 0405/001 981 6405 001 981 7205/004 981 7405
FX 47487/47420 A	47487/47420 A	000 981 5705/002 981 1605
FX HM 911244/216	HM 911244/HM 911216	
<b>SERIES 1714-1718-1720-1721-1723</b>		<b>ENGINE</b>
FX 30203	30203	
FX 30204	30204	

<b>SERIES 1800</b>		<b>AXLE</b>
FX 32019 X	32019 X	003 981 5405/001 980 2602 002 981 5405/003 981 5105 006 981 4705
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32311	32311	010 981 9305/006 981 7405 006 981 6905/006 981 0805
FX 33210	33210	005 981 4005/002 981 7905 003 981 8305/004 981 4205
FX 32311	32311	010 981 9305/006 981 7405 006 981 6905/006 981 0805
FX 32314 B	32314 B	
FX 33214	33214	003 981 5205/003 981 5605 003 981 8505/004 981 7305 006 981 5205/001 980 1002

Fox Number	Bearing Number	Original Reference
<b>SERIES 1800</b>		<b>AXLE</b>
FX JH 415647/JH 415610	JH 415647/JH 415610	
FX 30220	30220	004 981 2105/004 981 4905
FX 32020 X	32020 X	006 981 0405/001 981 6405 001 981 7205/004 981 7405
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
FX 33220	33220	003 981 4505/004 981 1005 008 981 3405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105

<b>SERIES 1819-1820</b>		<b>GEAR CASE</b>
FX 33011	33011	002 981 9305/003 981 4305 005 981 4405/007 981 5705 009 981 9305
FX 33112	33112	008 981 9505
FX 33209	33209	003 981 5305/003 981 5705 004 981 7205/005 981 4105
FX 33210	33210	005 981 4005/002 981 7905 003 981 8305/004 981 4205
FX 33212	33212	
FX 33885/33822	33885/33822	

Fox Number	Bearing Number	Original Reference
<b>SERIES 1819-1820</b>		<b>GEAR CASE</b>
FX 33889/33822	33889/33822	
<b>SERIES 1819-1820</b>		<b>AXLE</b>
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 497/492 A	497/492 A	000 981 6105/001 981 1405
FX 498/492 A	498/492 A	
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
<b>SERIES 1819-1820</b>		<b>DIFFERENTIAL</b>
FX 33111	33111	000 980 7502/002 981 8205 006 981 8205/008 981 3605 000 981 8302
FX 47487/47420 A	47487/47420 A	000 981 5705/002 981 1605
FX HM 911244/216	HM 911244/HM 911216	
<b>SERIES 1900</b>		<b>AXLE</b>
FX 32019 X	32019 X	003 981 5405/001 980 2602 002 981 5405/003 981 5105 006 981 4705
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32311	32311	010 981 9305/006 981 7405 006 981 6905/006 981 0805
FX 33209	33209	003 981 5305/003 981 5705 004 981 7205/005 981 4105
FX 33210	33210	005 981 4005/002 981 7905 003 981 8305/004 981 4205
FX 30314	30314	001 981 7705/001 981 7505
FX 32314 B	32314 B	



Fox Number	Bearing Number	Original Reference
<b>SERIES 1900</b>		<b>AXLE</b>
FX 33214	33214	003 981 5205/003 981 5605 003 981 8505/004 981 7305 006 981 5205/001 980 1002
FX JH 415647/JH 415610	JH 415647/JH 415610	
FX 30220	30220	004 981 2105/004 981 4905
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
FX 33220	33220	003 981 4505/004 981 1005 008 981 3405
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105

<b>SERIES 1924-1924A-1929-1930-1932-1933-1934-1935-1938-1941</b>		<b>GEAR CASE</b>
FX 32309	32309	004 981 1305
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 33885/33822	33885/33822	

<b>SERIES 1924-1924A-1929-1930-1932-1933-1934-1935-1938-1941</b>		<b>AXLE</b>
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 33210	33210	005 981 4005/002 981 7905 003 981 8305/004 981 4205
FX 33214	33214	003 981 5205/003 981 5605 003 981 8505/004 981 7305 006 981 5205/001 980 1002

Fox Number	Bearing Number	Original Reference
<b>SERIES 1924-1924A-1929-1930-1932-1933-1934-1935-1938-1941</b>		<b>AXLE</b>
FX 30220	30220	004 981 2105/004 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105
<b>SERIES 1924-1924A-1929-1930-1932-1933-1934-1935-1938-1941</b>		<b>DIFFERENTIAL</b>
FX 31313	31313	
FX 33115	33115	003 981 3205
<b>SERIES 1924-1924A-1929-1930-1932-1933-1934-1935-1938-1941</b>		<b>ENGINE</b>
FX 32205	32205	

<b>SERIES 2000</b>		<b>AXLE</b>
FX 32019 X	32019 X	003 981 5405/001 980 2602 002 981 5405/003 981 5105 006 981 4705
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32311	32311	010 981 9305/006 981 7405 006 981 6905/006 981 0805
FX 33209	33209	003 981 5305/003 981 5705 004 981 7205/005 981 4105
FX 33210	33210	005 981 4005/002 981 7905 003 981 8305/004 981 4205
FX 32314 B	32314 B	
FX 33214	33214	003 981 5205/003 981 5605 003 981 8505/004 981 7305 006 981 5205/001 980 1002
FX JH 415647/JH 415610	JH 415647/JH 415610	
FX 30220	30220	004 981 2105/004 981 4905

Fox Number	Bearing Number	Original Reference
<b>SERIES 2000</b>		<b>AXLE</b>
FX 32020 X	32020 X	006 981 0405/001 981 6405 001 981 7205/004 981 7405
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
FX 33220	33220	003 981 4505/004 981 1005 008 981 3405
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105

<b>SERIES 2013-2014-2016-2017</b>		<b>GEAR CASE</b>
FX 30308	30308	

<b>SERIES 2013-2014-2016-2017</b>		<b>AXLE</b>
FX T 144	T 144	
FX 32307	32307	000 981 9605/001 981 5605 001 981 7005/003 981 6405 006 981 0705
FX 33208	33208	003 981 3905/003 981 7205 004 981 6805/006 981 6205 008 981 7505
FX 33213	33213	006 981 6305/001 980 0902 003 981 3705/003 981 7405
FX 559/552 A	559/552 A	

Fox Number	Bearing Number	Original Reference
<b>SERIES 2013-2014-2016-2017</b>		<b>AXLE</b>
FX 565 S/562 X	565 S/562 X	
FX 497/492 A	497/492 A	000 981 6105/001 981 1405
FX 498/492 A	498/492 A	
FX 33114	33114	
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 598 A/593 X	598 A/593 X	
<b>SERIES 2013-2014-2016-2017</b>		<b>DIFFERENTIAL</b>
FX 33114	33114	
FX 47487/47420 A	47487/47420 A	000 981 5705/002 981 1605
FX HM 911244/216	HM 911244/HM 911216	
<b>SERIES 2013-2014-2016-2017</b>		<b>ENGINE</b>
FX 30203	30203	
FX 30204	30204	
<b>SERIES 2200</b>		<b>AXLE</b>
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 33209	33209	003 981 5305/003 981 5705 004 981 7205/005 981 4105
FX 33210	33210	005 981 4005/002 981 7905 003 981 8305/004 981 4205
FX 32314 B	32314 B	
FX 33214	33214	003 981 5205/003 981 5605 003 981 8505/004 981 7305 006 981 5205/001 980 1002
FX 30220	30220	004 981 2105/004 981 4905

Fox Number	Bearing Number	Original Reference
<b>SERIES 2200</b>		<b>AXLE</b>
FX 32019 X	32019 X	003 981 5405/001 980 2602 002 981 5405/003 981 5105 006 981 4705
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 33208	33208	003 981 3905/003 981 7205 004 981 6805/006 981 6205 008 981 7505
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
FX 30314	30314	001 981 7705/001 981 7505
FX 32021 X	32021 X	009 981 9401/003 981 2505 003 981 2705
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105
FX 33213	33213	006 981 6305/001 980 0902 003 981 3705/003 981 7405

<b>SERIES 2213-2214-2215-2216-2217-2219-2220-2222-2225</b>		<b>GEAR CASE</b>
FX 30308	30308	
FX 30309	30309	006 981 4205/001 981 3705
FX 32309	32309	004 981 1305
FX 33011	33011	002 981 9305/003 981 4305 005 981 4405/007 981 5705 009 981 9305

Fox Number	Bearing Number	Original Reference
<b>SERIES 2213-2214-2215-2216-2217-2219-2220-2222-2225</b>		<b>GEAR CASE</b>
FX 33112	33112	008 981 9505
FX 33209	33209	003 981 5305/003 981 5705 004 981 7205/005 981 4105
FX 33210	33210	005 981 4005/002 981 7905 003 981 8305/004 981 4205
FX 33212	33212	
FX 25590/25520	25590/25520	
FX 33885/33822	33885/33822	
FX 33889/33822	33889/33822	
<b>SERIES 2213-2214-2215-2216-2217-2219-2220-2222-2225</b>		<b>AXLE</b>
FX T 144	T 144	
FX 32307	32307	000 981 9605/001 981 5605 001 981 7005/003 981 6405 006 981 0705
FX 33015	33015	
FX 33208	33208	003 981 3905/003 981 7205 004 981 6805/006 981 6205 008 981 7505
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33213	33213	006 981 6305/001 980 0902 003 981 3705/003 981 7405
FX 497/492 A	497/492 A	000 981 6105/001 981 1405
FX 559/552 A	559/552 A	
FX 565 S/562 X	565 S/562 X	
FX 498/492 A	498/492 A	
FX 33114	33114	

Fox Number	Bearing Number	Original Reference
<b>SERIES 2213-2214-2215-2216-2217-2219-2220-2222-2225</b>		<b>AXLE</b>
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
FX 598 A/593 X	598 A/593 X	
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
<b>SERIES 2213-2214-2215-2216-2217-2219-2220-2222-2225</b>		<b>DIFFERENTIAL</b>
FX 47487/47420 A	47487/47420 A	000 981 5705/002 981 1605
FX HM 911244/216	HM 911244/HM 911216	
FX 32018 X	32018 X	000720 032018/004 981 1705 005 981 5605/004 981 4305 006 981 0005
FX 33114	33114	
FX 598 A/593 X	598 A/593 X	
<b>SERIES 2213-2214-2215-2216-2217-2219-2220-2222-2225</b>		<b>ENGINE</b>
FX 30203	30203	
FX 30204	30204	
FX 32205	32205	
<b>SERIES 2300</b>		<b>AXLE</b>
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32314 B	32314 B	

Fox Number	Bearing Number	Original Reference
<b>SERIES 2300</b>		<b>AXLE</b>
FX 32019 X	32019 X	003 981 5405/001 980 2602 002 981 5405/003 981 5105 006 981 4705
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905

<b>SERIES 2314-2318-2325</b>		<b>GEAR CASE</b>
FX 30308	30308	
FX 33011	33011	002 981 9305/003 981 4305 005 981 4405/007 981 5705 009 981 9305
FX 33112	33112	008 981 9505
FX 33209	33209	003 981 5305/003 981 5705 004 981 7205/005 981 4105
FX 33210	33210	005 981 4005/002 981 7905 003 981 8305/004 981 4205
FX 33212	33212	
FX 33889/33822	33889/33822	
FX 33885/33822	33885/33822	

<b>SERIES 2314-2318-2325</b>		<b>AXLE</b>
FX 33208	33208	003 981 3905/003 981 7205 004 981 6805/006 981 6205 008 981 7505
FX 33213	33213	006 981 6305/001 980 0902 003 981 3705/003 981 7405
FX 32018 X	32018 X	000720 032018/004 981 1705 005 981 5605/004 981 4305 006 981 0005
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905



Fox Number	Bearing Number	Original Reference
<b>SERIES 2314-2318-2325</b>		<b>AXLE</b>
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
<b>SERIES 2314-2318-2325</b>		<b>DIFFERENTIAL</b>
FX 32018 X	32018 X	000720 032018/004 981 1705 005 981 5605/004 981 4305 006 981 0005
FX 33114	33114	
FX 47487/47420 A	47487/47420 A	000 981 5705/002 981 1605
FX HM 911244/216	HM 911244/HM 911216	
<b>SERIES 2314-2318-2325</b>		<b>ENGINE</b>
FX 30203	30203	
FX 30204	30204	
<b>SERIES 2400</b>		<b>AXLE</b>
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32311	32311	010 981 9305/006 981 7405 006 981 6905/006 981 0805
FX 33210	33210	005 981 4005/002 981 7905 003 981 8305/004 981 4205
FX 32314 B	32314 B	
FX JH 415647/JH 415610	JH 415647/JH 415610	
FX 30220	30220	004 981 2105/004 981 4905

Fox Number	Bearing Number	Original Reference
<b>SERIES 2400</b>		<b>AXLE</b>
FX 32019 X	32019 X	003 981 5405/001 980 2602 002 981 5405/003 981 5105 006 981 4705
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105

<b>SERIES 2418-2420-2423</b>		<b>AXLE</b>
FX 33210	33210	005 981 4005/002 981 7905 003 981 8305/004 981 4205
FX 33214	33214	003 981 5205/003 981 5605 003 981 8505/004 981 7305 006 981 5205/001 980 1002
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405

<b>SERIES 2418-2420-2423</b>		<b>DIFFERENTIAL</b>
FX 32020 X	32020 X	006 981 0405/001 981 6405 001 981 7205/004 981 7405
FX 33114	33114	
FX 47487/47420 A	47487/47420 A	000 981 5705/002 981 1605

Fox Number	Bearing Number	Original Reference
<b>SERIES 2418-2420-2423</b>		<b>DIFFERENTIAL</b>
FX HM 911244/216	HM 911244/HM 911216	
<b>SERIES 2418-2420-2423</b>		<b>ENGINE</b>
FX 30203	30203	
FX 30204	30204	
<b>SERIES 2500</b>		<b>AXLE</b>
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32311	32311	010 981 9305/006 981 7405 006 981 6905/006 981 0805
FX 32314 B	32314 B	
FX JH 415647/JH 415610	JH 415647/JH 415610	
FX 30220	30220	004 981 2105/004 981 4905
FX 32019 X	32019 X	003 981 5405/001 980 2602 002 981 5405/003 981 5105 006 981 4705
FX 32020 X	32020 X	006 981 0405/001 981 6405 001 981 7205/004 981 7405
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 33210	33210	005 981 4005/002 981 7905 003 981 8305/004 981 4205
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105

Fox Number	Bearing Number	Original Reference
<b>SERIES 2500</b>		<b>AXLE</b>
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105

<b>SERIES 2600</b>		<b>AXLE</b>
FX 32019 X	32019 X	003 981 5405/001 980 2602 002 981 5405/003 981 5105 006 981 4705
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32311	32311	010 981 9305/006 981 7405 006 981 6905/006 981 0805
FX 33210	33210	005 981 4005/002 981 7905 003 981 8305/004 981 4205
FX 30314	30314	001 981 7705/001 981 7505
FX 32314 B	32314 B	
FX JH 415647/JH 415610	JH 415647/JH 415610	
FX 30220	30220	004 981 2105/004 981 4905
FX 32020 X	32020 X	006 981 0405/001 981 6405 001 981 7205/004 981 7405
FX 33208	33208	003 981 3905/003 981 7205 004 981 6805/006 981 6205 008 981 7505
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 33220	33220	003 981 4505/004 981 1005 008 981 3405

Fox Number	Bearing Number	Original Reference
<b>SERIES 2600</b>		<b>AXLE</b>
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105
FX 33213	33213	006 981 6305/001 980 0902 003 981 3705/003 981 7405

<b>SERIES 2629-2635-2638</b>		<b>GEAR CASE</b>
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 33889/33822	33889/33822	
FX 33885/33822	33885/33822	

<b>SERIES 2629-2635-2638</b>		<b>AXLE</b>
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 30220	30220	004 981 2105/004 981 4905
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105

<b>SERIES 2629-2635-2638</b>		<b>DIFFERENTIAL</b>
FX 32018 X	32018 X	000720 032018/004 981 1705 005 981 5605/004 981 4305 006 981 0005
FX 33115	33115	003 981 3205

Fox Number	Bearing Number	Original Reference
<b>SERIES 2629-2635-2638</b>		<b>ENGINE</b>
FX 32205	32205	
<b>SERIES 2800</b>		<b>AXLE</b>
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 33210	33210	005 981 4005/002 981 7905 003 981 8305/004 981 4205
FX 32314 B	32314 B	
<b>SERIES 3000</b>		<b>AXLE</b>
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32311	32311	010 981 9305/006 981 7405 006 981 6905/006 981 0805
FX 33210	33210	005 981 4005/002 981 7905 003 981 8305/004 981 4205
FX 32314 B	32314 B	
FX JH 415647/JH 415610	JH 415647/JH 415610	
FX 30220	30220	004 981 2105/004 981 4905
FX 32019 X	32019 X	003 981 5405/001 980 2602 002 981 5405/003 981 5105 006 981 4705
FX 33220	33220	003 981 4505/004 981 1005 008 981 3405
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105

Fox Number	Bearing Number	Original Reference
<b>SERIES 307 D</b>		<b>AXLE</b>
FX 33205	33205	140 981 0005/003 981 1005 003 981 1505/003 981 9505 005 981 2205
FX 1380/1328	1380/1328	000 981 5402/000 980 5002 000 980 5402/000 980 5502 124 981 0305
FX 33109	33109	003 981 1105/003 981 1605 003 981 9605
FX 2789/2720	2789/2720	002 981 2705/000 980 1402 002 981 2805

<b>SERIES 308-308 D</b>		<b>AXLE</b>
FX 33205	33205	140 981 0005/003 981 1005 003 981 1505/003 981 9505 005 981 2205
FX 1380/1328	1380/1328	000 981 5402/000 980 5002 000 980 5402/000 980 5502 124 981 0305
FX 33109	33109	003 981 1105/003 981 1605 003 981 9605
FX 2789/2720	2789/2720	002 981 2705/000 980 1402 002 981 2805

<b>SERIES 309-309 D</b>		<b>AXLE</b>
FX 33205	33205	140 981 0005/003 981 1005 003 981 1505/003 981 9505 005 981 2205
FX 1380/1328	1380/1328	000 981 5402/000 980 5002 000 980 5402/000 980 5502 124 981 0305
FX 33109	33109	003 981 1105/003 981 1605 003 981 9605

Fox Number	Bearing Number	Original Reference
<b>SERIES 309-309 D</b>		<b>AXLE</b>
FX 2789/2720	2789/2720	002 981 2705/000 980 1402 002 981 2805

<b>SERIES 310-310 D</b>		<b>AXLE</b>
FX 33205	33205	140 981 0005/003 981 1005 003 981 1505/003 981 9505 005 981 2205
FX 1380/1328	1380/1328	000 981 5402/000 980 5002 000 980 5402/000 980 5502 124 981 0305
FX 33109	33109	003 981 1105/003 981 1605 003 981 9605
FX 2789/2720	2789/2720	002 981 2705/000 980 1402 002 981 2805

<b>SERIES 312</b>		<b>GEAR CASE</b>
FX 30306	30306	
FX 32305	32305	
FX 32306	32306	000 981 9505/001 981 8305 001 981 8705/006 981 5905 001 981 9505/312 981 0501

<b>SERIES 312</b>		<b>AXLE</b>
FX T 138	T 138	
FX 32211	32211	000 981 3305/000 981 9005 001 981 8405/001 981 8605 002 981 2405/319 981 0205
FX 32306	32306	000 981 9505/001 981 8305 001 981 8705/006 981 5905 001 981 9505/312 981 0501
FX 32307	32307	000 981 9605/001 981 5605 001 981 7005/003 981 6405 006 981 0705



Fox Number	Bearing Number	Original Reference
<b>SERIES 312</b>		<b>AXLE</b>
FX 33205	33205	140 981 0005/003 981 1005 003 981 1505/003 981 9505 005 981 2205
FX 1380/1328	1380/1328	000 981 5402/000 980 5002 000 980 5402/000 980 5502 124 981 0305
FX 30312	30312	001 981 9705/000 981 8905 012 981 9705
FX 33109	33109	003 981 1105/003 981 1605 003 981 9605
FX 2789/2720	2789/2720	002 981 2705/000 980 1402 002 981 2805
FX 32212	32212	
FX 32214	32214	004 981 7305
<b>SERIES 312</b>		<b>DIFFERENTIAL</b>
FX 32212	32212	
<b>SERIES 312</b>		<b>ENGINE</b>
FX 30302	30302	

<b>SERIES 314</b>		<b>AXLE</b>
FX 33205	33205	140 981 0005/003 981 1005 003 981 1505/003 981 9505 005 981 2205
FX 1380/1328	1380/1328	000 981 5402/000 980 5002 000 980 5402/000 980 5502 124 981 0305
FX 33109	33109	003 981 1105/003 981 1605 003 981 9605
FX 2789/2720	2789/2720	002 981 2705/000 980 1402 002 981 2805

Fox Number	Bearing Number	Original Reference
<b>SERIES 315</b>		<b>AXLE</b>
FX 33205	33205	140 981 0005/003 981 1005 003 981 1505/003 981 9505 005 981 2205
FX 1380/1328	1380/1328	000 981 5402/000 980 5002 000 980 5402/000 980 5502 124 981 0305
FX 33109	33109	003 981 1105/003 981 1605 003 981 9605
FX 2789/2720	2789/2720	002 981 2705/000 980 1402 002 981 2805
<b>SERIES 321</b>		<b>GEAR CASE</b>
FX 30308	30308	
FX 30309	30309	006 981 4205/001 981 3705
<b>SERIES 321</b>		<b>AXLE</b>
FX T 138	T 138	
FX 32307	32307	000 981 9605/001 981 5605 001 981 7005/003 981 6405 006 981 0705
FX 30312	30312	001 981 9705/000 981 8905 012 981 9705
FX 32213	32213	000 981 4105
FX 32216	32216	000 981 0305/000 981 2401 000 981 7205/000 981 9405 006 981 0605
<b>SERIES 321</b>		<b>DIFFERENTIAL</b>
FX 32212	32212	
FX 32213	32213	000 981 4105
FX HM 911244/216	HM 911244/HM 911216	

Fox Number	Bearing Number	Original Reference
<b>SERIES 321</b>		<b>ENGINE</b>
FX 30302	30302	
<b>SERIES 331</b>		<b>GEAR CASE</b>
FX HM 516449/410	HM 516449/HM 516410	
<b>SERIES 331</b>		<b>STEERING</b>
FX 45 BC/46	45 BC/46	
45 BC/47	45 BC/47	
<b>SERIES 331</b>		<b>AXLE</b>
FX 32309	32309	004 981 1305
FX 30313	30313	
FX 32218	32218	
FX 580/572	580/572	000 981 5605/002 981 0005 004 981 4605/004 981 4705 004 981 4805
FX 77376/77675	77376/77675	
FX 32219	32219	000 981 2105
<b>SERIES 331</b>		<b>DIFFERENTIAL</b>
FX 30216	30216	000 981 0205/001 981 8505
FX 32216	32216	000 981 0305/000 981 2401 000 981 7205/000 981 9405 006 981 0605
FX 65225/65500	65225/65500	
FX HM 807046/010	HM 807046/HM807010	
<b>SERIES 331</b>		<b>ENGINE</b>
FX 30204	30204	
FX 30205	30205	

Fox Number	Bearing Number	Original Reference
<b>SERIES 370-371</b>		<b>STEERING</b>
FX 30205	30205	
FX 30206	30206	
<b>SERIES 370-371</b>		<b>ENGINE</b>
FX 30203	30203	
FX 30204	30204	
FX 32205	32205	
<b>SERIES 3200</b>		<b>AXLE</b>
FX 32019 X	32019 X	003 981 5405/001 980 2602 002 981 5405/003 981 5105 006 981 4705
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32314 B	32314 B	
FX 30220	30220	004 981 2105/004 981 4905
FX 32020 X	32020 X	006 981 0405/001 981 6405 001 981 7205/004 981 7405
FX 32215	32215	000 981 7405/000 981 8405 001 981 4805/327 981 0305
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 33220	33220	003 981 4505/004 981 1005 008 981 3405
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905

Fox Number	Bearing Number	Original Reference
<b>SERIES 3200</b>		<b>AXLE</b>
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105

<b>SERIES 3300</b>		<b>AXLE</b>
FX 32019 X	32019 X	003 981 5405/001 980 2602 002 981 5405/003 981 5105 006 981 4705
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32311	32311	010 981 9305/006 981 7405 006 981 6905/006 981 0805
FX 33210	33210	005 981 4005/002 981 7905 003 981 8305/004 981 4205
FX 32314 B	32314 B	
FX JH 415647/JH 415610	JH 415647/JH 415610	
FX 30220	30220	004 981 2105/004 981 4905
FX 32020 X	32020 X	006 981 0405/001 981 6405 001 981 7205/004 981 7405
FX 33220	33220	003 981 4505/004 981 1005 008 981 3405
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105

<b>SERIES 3500</b>		<b>AXLE</b>
FX 32019 X	32019 X	003 981 5405/001 980 2602 002 981 5405/003 981 5105 006 981 4705

Fox Number	Bearing Number	Original Reference
<b>SERIES 3500</b>		<b>AXLE</b>
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32311	32311	010 981 9305/006 981 7405 006 981 6905/006 981 0805
FX 32314 B	32314 B	
FX JH 415647/JH 415610	JH 415647/JH 415610	
FX 30220	30220	004 981 2105/004 981 4905
FX 33220	33220	003 981 4505/004 981 1005 008 981 3405
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105

<b>SERIES 3600</b>		<b>AXLE</b>
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32314 B	32314 B	
FX 30220	30220	004 981 2105/004 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105

<b>SERIES 3800</b>		<b>AXLE</b>
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32314 B	32314 B	
FX 33220	33220	003 981 4505/004 981 1005 008 981 3405
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105

Fox Number	Bearing Number	Original Reference
------------	----------------	--------------------

SERIES 4000		AXLE
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32314 B	32314 B	
FX 30220	30220	004 981 2105/004 981 4905
FX 33220	33220	003 981 4505/004 981 1005 008 981 3405
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105

SERIES 406		AXLE
FX 32207	32207	319 981 0005
FX 33205	33205	140 981 0005/003 981 1005 003 981 1505/003 981 9505 005 981 2205
FX 1380/1328	1380/1328	000 981 5402/000 980 5002 000 980 5402/000 980 5502 124 981 0305
FX 32304	32304	001 981 9005/002 981 2005 319 981 0605
FX 33109	33109	003 981 1105/003 981 1605 003 981 9605
FX 2789/2720	2789/2720	002 981 2705/000 980 1402 002 981 2805
FX 32210	32210	000 981 3605/001 981 8905 002 981 1905/002 981 2205 005 981 5305/319 981 0405
FX 32011 X	32011 X	000 981 9002/002 981 1305 002 981 6605/0006 981 5605 007 981 0405

Fox Number	Bearing Number	Original Reference
<b>SERIES 406</b>		<b>AXLE</b>
FX 32211	32211	000 981 3305/000 981 9005 001 981 8405/001 981 8605 002 981 2405/319 981 0205

<b>SERIES 407</b>		<b>AXLE</b>
FX 32207	32207	319 981 0005
FX 33205	33205	140 981 0005/003 981 1005 003 981 1505/003 981 9505 005 981 2205
FX 1380/1328	1380/1328	000 981 5402/000 980 5002 000 980 5402/000 980 5502 124 981 0305
FX 32304	32304	001 981 9005/002 981 2005 319 981 0605
FX 33109	33109	003 981 1105/003 981 1605 003 981 9605
FX 2789/2720	2789/2720	002 981 2705/000 980 1402 002 981 2805
FX 32210	32210	000 981 3605/001 981 8905 002 981 1905/002 981 2205 005 981 5305/319 981 0405
FX 32011 X	32011 X	000 981 9002/002 981 1305 002 981 6605/0006 981 5605 007 981 0405
FX 32211	32211	000 981 3305/000 981 9005 001 981 8405/001 981 8605 002 981 2405/319 981 0205

<b>SERIES 408</b>		<b>AXLE</b>
FX 32207	32207	319 981 0005
FX 33205	33205	140 981 0005/003 981 1005 003 981 1505/003 981 9505 005 981 2205



Fox Number	Bearing Number	Original Reference
<b>SERIES 408</b>		<b>AXLE</b>
FX 1380/1328	1380/1328	000 981 5402/000 980 5002 000 980 5402/000 980 5502 124 981 0305
FX 32304	32304	001 981 9005/002 981 2005 319 981 0605
FX 33109	33109	003 981 1105/003 981 1605 003 981 9605
FX 2789/2720	2789/2720	002 981 2705/000 980 1402 002 981 2805
FX 32210	32210	000 981 3605/001 981 8905 002 981 1905/002 981 2205 005 981 5305/319 981 0405
FX 32011 X	32011 X	000 981 9002/002 981 1305 002 981 6605/0006 981 5605 007 981 0405
FX 32211	32211	000 981 3305/000 981 9005 001 981 8405/001 981 8605 002 981 2405/319 981 0205

<b>SERIES 409</b>		<b>AXLE</b>
FX 32207	32207	319 981 0005
FX 33205	33205	140 981 0005/003 981 1005 003 981 1505/003 981 9505 005 981 2205
FX 1380/1328	1380/1328	000 981 5402/000 980 5002 000 980 5402/000 980 5502 124 981 0305
FX 32304	32304	001 981 9005/002 981 2005 319 981 0605
FX 33109	33109	003 981 1105/003 981 1605 003 981 9605
FX 2789/2720	2789/2720	002 981 2705/000 980 1402 002 981 2805

Fox Number	Bearing Number	Original Reference
<b>SERIES 409</b>		<b>AXLE</b>
FX 32210	32210	000 981 3605/001 981 8905 002 981 1905/002 981 2205 005 981 5305/319 981 0405
FX 32011 X	32011 X	000 981 9002/002 981 1305 002 981 6605/0006 981 5605
FX 32211	32211	000 981 3305/000 981 9005 001 981 8405/001 981 8605 002 981 2405/319 981 0205

<b>SERIES 410</b>		<b>AXLE</b>
FX 32207	32207	319 981 0005
FX 33205	33205	140 981 0005/003 981 1005 003 981 1505/003 981 9505 005 981 2205
FX 1380/1328	1380/1328	000 981 5402/000 980 5002 000 980 5402/000 980 5502 124 981 0305
FX 32304	32304	001 981 9005/002 981 2005 319 981 0605
FX 33109	33109	003 981 1105/003 981 1605 003 981 9605
FX 2789/2720	2789/2720	002 981 2705/000 980 1402 002 981 2805
FX 32210	32210	000 981 3605/001 981 8905 002 981 1905/002 981 2205 005 981 5305/319 981 0405
FX 32011 X	32011 X	000 981 9002/002 981 1305 002 981 6605/0006 981 5605 007 981 0405
FX 32211	32211	000 981 3305/000 981 9005 001 981 8405/001 981 8605 002 981 2405/319 981 0205

Fox Number	Bearing Number	Original Reference
<b>SERIES 4100</b>		<b>AXLE</b>
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32311	32311	010 981 9305/006 981 7405 006 981 6905/006 981 0805
FX 32314 B	32314 B	
FX 30220	30220	004 981 2105/004 981 4905
FX 32020 X	32020 X	006 981 0405/001 981 6405 001 981 7205/004 981 7405
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 33220	33220	003 981 4505/004 981 1005 008 981 3405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105

<b>SERIES 412</b>		<b>AXLE</b>
FX 32207	32207	319 981 0005
FX 33205	33205	140 981 0005/003 981 1005 003 981 1505/003 981 9505 005 981 2205
FX 1380/1328	1380/1328	000 981 5402/000 980 5002 000 980 5402/000 980 5502 124 981 0305
FX 32304	32304	001 981 9005/002 981 2005 319 981 0605
FX 33109	33109	003 981 1105/003 981 1605 003 981 9605

Fox Number	Bearing Number	Original Reference
<b>SERIES 412</b>		<b>AXLE</b>
FX 2789/2720	2789/2720	002 981 2705/000 980 1402 002 981 2805
FX 32210	32210	000 981 3605/001 981 8905 002 981 1905/002 981 2205 005 981 5305/319 981 0405
FX 32011 X	32011 X	000 981 9002/002 981 1305 002 981 6605/0006 981 5605 007 981 0405
FX 32211	32211	000 981 3305/000 981 9005 001 981 8405/001 981 8605 002 981 2405/319 981 0205

<b>SERIES 414</b>		<b>AXLE</b>
FX 32207	32207	319 981 0005
FX 33205	33205	140 981 0005/003 981 1005 003 981 1505/003 981 9505 005 981 2205
FX 1380/1328	1380/1328	000 981 5402/000 980 5002 000 980 5402/000 980 5502 124 981 0305
FX 32304	32304	001 981 9005/002 981 2005 319 981 0605
FX 33109	33109	003 981 1105/003 981 1605 003 981 9605
FX 2789/2720	2789/2720	002 981 2705/000 980 1402 002 981 2805
FX 32210	32210	000 981 3605/001 981 8905 002 981 1905/002 981 2205 005 981 5305/319 981 0405
FX 32011 X	32011 X	000 981 9002/002 981 1305 002 981 6605/0006 981 5605 007 981 0405

Fox Number	Bearing Number	Original Reference
<b>SERIES 414</b>		<b>AXLE</b>
FX 32211	32211	000 981 3305/000 981 9005 001 981 8405/001 981 8605 002 981 2405/319 981 0205

<b>SERIES 415</b>		<b>AXLE</b>
FX 32207	32207	319 981 0005
FX 33205	33205	140 981 0005/003 981 1005 003 981 1505/003 981 9505 005 981 2205
FX 1380/1328	1380/1328	000 981 5402/000 980 5002 000 980 5402/000 980 5502 124 981 0305
FX 32304	32304	001 981 9005/002 981 2005 319 981 0605
FX 33109	33109	003 981 1105/003 981 1605 003 981 9605
FX 2789/2720	2789/2720	002 981 2705/000 980 1402 002 981 2805
FX 32210	32210	000 981 3605/001 981 8905 002 981 1905/002 981 2205 005 981 5305/319 981 0405
FX 32011 X	32011 X	000 981 9002/002 981 1305 002 981 6605/0006 981 5605 007 981 0405
FX 32211	32211	000 981 3305/000 981 9005 001 981 8405/001 981 8605 002 981 2405/319 981 0205

<b>SERIES 4400</b>		<b>AXLE</b>
FX 32019 X	32019 X	003 981 5405/001 980 2602 002 981 5405/003 981 5105 006 981 4705

Fox Number	Bearing Number	Original Reference
<b>SERIES 4400</b>		<b>AXLE</b>
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32311	32311	010 981 9305/006 981 7405 006 981 6905/006 981 0805
FX 32314 B	32314 B	
FX JH 415647/JH 415610	JH 415647/JH 415610	
FX 30220	30220	004 981 2105/004 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105

<b>SERIES 4800</b>		<b>AXLE</b>
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32311	32311	010 981 9305/006 981 7405 006 981 6905/006 981 0805
FX 32314 B	32314 B	
FX JH 415647/JH 415610	JH 415647/JH 415610	
FX 30220	30220	004 981 2105/004 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105

<b>SERIES 500</b>		<b>AXLE</b>
FX 33205	33205	140 981 0005/003 981 1005 003 981 1505/003 981 9505 005 981 2205
FX 1380/1328	1380/1328	000 981 5402/000 980 5002 000 980 5402/000 980 5502 124 981 0305

Fox Number	Bearing Number	Original Reference
<b>SERIES 500</b>		<b>AXLE</b>
FX 33109	33109	003 981 1105/003 981 1605 003 981 9605
FX 2789/2720	2789/2720	002 981 2705/000 980 1402 002 981 2805
FX 32210	32210	000 981 3605/001 981 8905 002 981 1905/002 981 2205 005 981 5305/319 981 0405
FX 33895/33820	33895/33820	002 981 0505/000 980 6802 001 981 0505/001 981 3805
FX 32011 X	32011 X	000 981 9002/002 981 1305 002 981 6605/0006 981 5605 007 981 0405
FX 32012 X	32012 X	007 981 1405
FX 32211	32211	000 981 3305/000 981 9005 001 981 8405/001 981 8605 002 981 2405/319 981 0205
FX 3984/3920	3984/3920	001 981 0405/001 981 3905 002 981 0605

<b>SERIES 5000</b>		<b>AXLE</b>
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32311	32311	010 981 9305/006 981 7405 006 981 6905/006 981 0805
FX 32314 B	32314 B	
FX JH 415647/JH 415610	JH 415647/JH 415610	
FX 30220	30220	004 981 2105/004 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105
FX 33220	33220	003 981 4505/004 981 1005 008 981 3405

Fox Number	Bearing Number	Original Reference
<b>SERIES 600</b>		<b>AXLE</b>
FX 32206	32206	001 981 1505/001 981 6105 007 981 7605
FX 33205	33205	140 981 0005/003 981 1005 003 981 1505/003 981 9505 005 981 2205
FX 1380/1328	1380/1328	000 981 5402/000 980 5002 000 980 5402/000 980 5502 124 981 0305
FX 32011 X	32011 X	000 981 9002/002 981 1305 002 981 6605/0006 981 5605 007 981 0405
FX 33109	33109	003 981 1105/003 981 1605 003 981 9605
FX 33111	33111	000 980 7502/002 981 8205 006 981 8205/008 981 3605 000 981 8302
FX 2789/2720	2789/2720	002 981 2705/000 980 1402 002 981 2805
FX 32210	32210	000 981 3605/001 981 8905 002 981 1905/002 981 2205 005 981 5305/319 981 0405
FX 33011	33011	002 981 9305/003 981 4305 005 981 4405/007 981 5705 009 981 9305
FX 33895/33820	33895/33820	002 981 0505/000 980 6802 001 981 0505/001 981 3805
FX 32012 X	32012 X	007 981 1405
FX 32014 X	32014 X	000720 032014/005 981 6605 005 981 9505/005 981 9805
FX 3984/3920	3984/3920	001 981 0405/001 981 3905 002 981 0605



Fox Number	Bearing Number	Original Reference
<b>SERIES 608</b>		<b>GEAR CASE</b>
FX 30306	30306	
FX 30308	30308	
<b>SERIES 608</b>		<b>AXLE</b>
FX 32306	32306	000 981 9505/001 981 8305 001 981 8705/006 981 5905 001 981 9505/312 981 0501
FX 33205	33205	140 981 0005/003 981 1005 003 981 1505/003 981 9505 005 981 2205
FX 33109	33109	003 981 1105/003 981 1605 003 981 9605
FX 33111	33111	000 980 7502/002 981 8205 006 981 8205/008 981 3605 000 981 8302
FX 33011	33011	002 981 9305/003 981 4305 005 981 4405/007 981 5705 009 981 9305
FX 33895/33820	33895/33820	002 981 0505/000 980 6802 001 981 0505/001 981 3805
FX 33015	33015	
<b>SERIES 608</b>		<b>ENGINE</b>
FX 30203	30203	
FX 30204	30204	
<b>SERIES 6000</b>		<b>AXLE</b>
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32314 B	32314 B	

Fox Number	Bearing Number	Original Reference
<b>SERIES 700</b>		<b>AXLE</b>
FX 32206	32206	001 981 1505/001 981 6105 007 981 7605
FX 33205	33205	140 981 0005/003 981 1005 003 981 1505/003 981 9505 005 981 2205
FX 32011 X	32011 X	000 981 9002/002 981 1305 002 981 6605/0006 981 5605 007 981 0405
FX 33111	33111	000 980 7502/002 981 8205 006 981 8205/008 981 3605 000 981 8302
FX 33011	33011	002 981 9305/003 981 4305 005 981 4405/007 981 5705 009 981 9305
FX 33895/33820	33895/33820	002 981 0505/000 980 6802 001 981 0505/001 981 3805
FX 32014 X	32014 X	000720 032014/005 981 6605 005 981 9505/005 981 9805
FX 3984/3920	3984/3920	001 981 0405/001 981 3905 002 981 0605
FX JM 714249/210	JM 714249/JM 714210	008 981 5305/003 981 4705

<b>SERIES 708-709-710-712</b>		<b>GEAR CASE</b>
FX 30306	30306	
FX 30308	30308	

<b>SERIES 708-709-710-712</b>		<b>AXLE</b>
FX 32306	32306	000 981 9505/001 981 8305 001 981 8705/006 981 5905 001 981 9505/312 981 0501
FX 33205	33205	140 981 0005/003 981 1005 003 981 1505/003 981 9505 005 981 2205

Fox Number	Bearing Number	Original Reference
<b>SERIES 708-709-710-712</b>		<b>AXLE</b>
FX 33109	33109	003 981 1105/003 981 1605 003 981 9605
FX 33111	33111	000 980 7502/002 981 8205 006 981 8205/008 981 3605 000 981 8302
FX 33011	33011	002 981 9305/003 981 4305 005 981 4405/007 981 5705 009 981 9305
FX 33895/33820	33895/33820	002 981 0505/000 980 6802 001 981 0505/001 981 3805
FX 33015	33015	
<b>SERIES 708-709-710-712</b>		<b>ENGINE</b>
FX 30203	30203	
FX 30204	30204	
<b>SERIES 800</b>		<b>AXLE</b>
FX 32306	32306	000 981 9505/001 981 8305 001 981 8705/006 981 5905 001 981 9505/312 981 0501
FX 33205	33205	140 981 0005/003 981 1005 003 981 1505/003 981 9505 005 981 2205
FX 33208	33208	003 981 3905/003 981 7205 004 981 6805/006 981 6205 008 981 7505
FX 33109	33109	003 981 1105/003 981 1605 003 981 9605
FX 33111	33111	000 980 7502/002 981 8205 006 981 8205/008 981 3605 000 981 8302

Fox Number	Bearing Number	Original Reference
<b>SERIES 800</b>		<b>AXLE</b>
FX 33211	33211	004 981 6405/004 981 6505 004 981 6705/006 981 6005
FX 33213	33213	006 981 6305/001 980 0902 003 981 3705/003 981 7405
FX 32011 X	32011 X	000 981 9002/002 981 1305 002 981 6605/0006 981 5605 007 981 0405
FX 33011	33011	002 981 9305/003 981 4305 005 981 4405/007 981 5705 009 981 9305
FX 33111	33111	000 980 7502/002 981 8205 006 981 8205/008 981 3605 000 981 8302
FX 32014 X	32014 X	000720 032014/005 981 6605 005 981 9505/005 981 9805
FX 32016 X	32016 X	007 981 9405/000720 032016 007 981 9005
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 32216	32216	000 981 0305/000 981 2401 000 981 7205/000 981 9405 006 981 0605
FX 32217	32217	000 981 2205/002 981 1705 002 981 1805/327 981 0405 327 981 2205
FX 580/572	580/572	000 981 5605/002 981 0005 004 981 4605/004 981 4705 004 981 4805
FX 47490/47420	47490/47420	000 980 7202/000 980 7402 002 981 9202
FX JM 714249/210	JM 714249/JM 714210	008 981 5305/003 981 4705

Fox Number	Bearing Number	Original Reference
<b>SERIES 812-814</b>		<b>GEAR CASE</b>
FX 30308	30308	
<b>SERIES 812-814</b>		<b>AXLE</b>
FX 32306	32306	000 981 9505/001 981 8305 001 981 8705/006 981 5905 001 981 9505/312 981 0501
FX 33111	33111	000 980 7502/002 981 8205 006 981 8205/008 981 3605 000 981 8302
FX 33011	33011	002 981 9305/003 981 4305 005 981 4405/007 981 5705 009 981 9305
FX 33895/33820	33895/33820	002 981 0505/000 980 6802 001 981 0505/001 981 3805
FX 33015	33015	
FX 3984/3920	3984/3920	001 981 0405/001 981 3905 002 981 0605
<b>SERIES 812-814</b>		<b>ENGINE</b>
FX 30203	30203	
FX 30204	30204	
<b>SERIES 900</b>		<b>AXLE</b>
FX 32306	32306	000 981 9505/001 981 8305 001 981 8705/006 981 5905 001 981 9505/312 981 0501
FX 33208	33208	003 981 3905/003 981 7205 004 981 6805/006 981 6205 008 981 7505
FX 33111	33111	000 980 7502/002 981 8205 006 981 8205/008 981 3605 000 981 8302
FX 33211	33211	004 981 6405/004 981 6505 004 981 6705/006 981 6005

Fox Number	Bearing Number	Original Reference
<b>SERIES 900</b>		<b>AXLE</b>
FX 33213	33213	006 981 6305/001 980 0902 003 981 3705/003 981 7405
FX 32016 X	32016 X	007 981 9405/000720 032016 007 981 9005
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 32216	32216	000 981 0305/000 981 2401 000 981 7205/000 981 9405 006 981 0605
FX 32217	32217	000 981 2205/002 981 1705 002 981 1805/327 981 0405 327 981 2205
FX 580/572	580/572	000 981 5605/002 981 0005 004 981 4605/004 981 4705 004 981 4805
FX JM 714249/210	JM 714249/JM 714210	008 981 5305/003 981 4705

<b>SERIES 912-914</b>		<b>GEAR CASE</b>
FX 30308	30308	

<b>SERIES 912-914</b>		<b>AXLE</b>
FX 32306	32306	000 981 9505/001 981 8305 001 981 8705/006 981 5905 001 981 9505/312 981 0501
FX 33111	33111	000 980 7502/002 981 8205 006 981 8205/008 981 3605 000 981 8302
FX 33011	33011	002 981 9305/003 981 4305 005 981 4405/007 981 5705 009 981 9305
FX 33895/33822	33895/33822	002 981 0505/000 980 6802 001 981 0505/001 981 3805
FX 33015	33015	

Fox Number	Bearing Number	Original Reference
<b>SERIES 912-914</b>		<b>AXLE</b>
FX 3984/3920	3984/3920	001 981 0405/001 981 3905 002 981 0605
<b>SERIES 912-914</b>		<b>AXLE</b>
FX 30203	30203	
FX 30204	30204	
<b>SERIES ACTROS 1800</b>		<b>AXLE</b>
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32311	32311	010 981 9305/006 981 7405 006 981 6905/006 981 0805
FX 32312	32312	015 981 7505/011 981 6905 011 981 6805
FX 32314	32314	004 981 9805/012 981 3205 004 981 9905/005 981 0005
FX JH 415647/JH 415610	JH 415647/JH 415610	
FX 32020 X	32020 X	006 981 0405/001 981 6405 001 981 7205/004 981 7405
FX 33116	33116	017 981 4905/012 981 4105 012 981 4005
FX 33220	33220	003 981 4505/004 981 1005 008 981 3405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105

Fox Number	Bearing Number	Original Reference
<b>SERIES ACTROS 1900</b>		<b>AXLE</b>
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32311	32311	010 981 9305/006 981 7405 006 981 6905/006 981 0805
FX 32312	32312	015 981 7505/011 981 6905 011 981 6805
FX 32314	32314	004 981 9805/012 981 3205 004 981 9905/005 981 0005
FX JH 415647/JH 415610	JH 415647/JH 415610	
FX 32020 X	32020 X	006 981 0405/001 981 6405 001 981 7205/004 981 7405
FX 33116	33116	017 981 4905/012 981 4105 012 981 4005
FX 33220	33220	003 981 4505/004 981 1005 008 981 3405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105

<b>SERIES ACTROS 2000</b>		<b>AXLE</b>
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32311	32311	010 981 9305/006 981 7405 006 981 6905/006 981 0805
FX 32312	32312	015 981 7505/011 981 6905 011 981 6805



Fox Number	Bearing Number	Original Reference
<b>SERIES ACTROS 2000</b>		<b>AXLE</b>
FX 32314	32314	004 981 9805/012 981 3205 004 981 9905/005 981 0005
FX JH 415647/JH 415610	JH 415647/JH 415610	
FX 32020 X	32020 X	006 981 0405/001 981 6405 001 981 7205/004 981 7405
FX 33116	33116	017 981 4905/012 981 4105 012 981 4005
FX 33220	33220	003 981 4505/004 981 1005 008 981 3405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105

<b>SERIES ACTROS 2500</b>		<b>AXLE</b>
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32311	32311	010 981 9305/006 981 7405 006 981 6905/006 981 0805
FX 32312	32312	015 981 7505/011 981 6905 011 981 6805
FX 32314	32314	004 981 9805/012 981 3205 004 981 9905/005 981 0005
FX JH 415647/JH 415610	JH 415647/JH 415610	
FX 32020 X	32020 X	006 981 0405/001 981 6405 001 981 7205/004 981 7405
FX 33116	33116	017 981 4905/012 981 4105 012 981 4005

Fox Number	Bearing Number	Original Reference
<b>SERIES ACTROS 2500</b>		<b>AXLE</b>
FX 33220	33220	003 981 4505/004 981 1005 008 981 3405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105

<b>SERIES ACTROS 2600</b>		<b>AXLE</b>
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32311	32311	010 981 9305/006 981 7405 006 981 6905/006 981 0805
FX 32312	32312	015 981 7505/011 981 6905 011 981 6805
FX 32314	32314	004 981 9805/012 981 3205 004 981 9905/005 981 0005
FX JH 415647/JH 415610	JH 415647/JH 415610	
FX 32020 X	32020 X	006 981 0405/001 981 6405 001 981 7205/004 981 7405
FX 33116	33116	017 981 4905/012 981 4105 012 981 4005
FX 33220	33220	003 981 4505/004 981 1005 008 981 3405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105

Fox Number	Bearing Number	Original Reference
------------	----------------	--------------------

SERIES ACTROS 3200		AXLE
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32312	32312	015 981 7505/011 981 6905 011 981 6805
FX 32314	32314	004 981 9805/012 981 3205 004 981 9905/005 981 0005
FX 32020 X	32020 X	006 981 0405/001 981 6405 001 981 7205/004 981 7405
FX 33116	33116	017 981 4905/012 981 4105 012 981 4005
FX 33220	33220	003 981 4505/004 981 1005 008 981 3405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105

SERIES ACTROS 3300		AXLE
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32311	32311	010 981 9305/006 981 7405 006 981 6905/006 981 0805
FX 32312	32312	015 981 7505/011 981 6905 011 981 6805
FX 32314	32314	004 981 9805/012 981 3205 004 981 9905/005 981 0005
FX JH 415647/JH 415610	JH 415647/JH 415610	

Fox Number	Bearing Number	Original Reference
<b>SERIES ACTROS 3300</b>		<b>AXLE</b>
FX 32020 X	32020 X	006 981 0405/001 981 6405 001 981 7205/004 981 7405
FX 33116	33116	017 981 4905/012 981 4105 012 981 4005
FX 33220	33220	003 981 4505/004 981 1005 008 981 3405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105

<b>SERIES ATEGO 1000</b>		<b>AXLE</b>
FX 32306	32306	000 981 9505/001 981 8305 001 981 8705/006 981 5905 001 981 9505/312 981 0501
FX 33208	33208	003 981 3905/003 981 7205 004 981 6805/006 981 6205 008 981 7505
FX 33017	33017	006 981 8705/006 981 9705 007 981 4905
FX 33111	33111	000 980 7502/002 981 8205 006 981 8205/008 981 3605 000 981 8302
FX 33213	33213	006 981 6305/001 980 0902 003 981 3705/003 981 7405
FX 32018 X	32018 X	000720 032018/004 981 1705 005 981 5605/004 981 4305 006 981 0005
FX 33011	33011	002 981 9305/003 981 4305 005 981 4405/007 981 5705 009 981 9305

Fox Number	Bearing Number	Original Reference
<b>SERIES ATEGO 1000</b>		<b>AXLE</b>
FX 33014	33014	005 981 6905
FX 33116	33116	017 981 4905/012 981 4105 012 981 4005
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 580/572	580/572	000 981 5605/002 981 0005 004 981 4605/004 981 4705 004 981 4805
FX 32017 X	32017 X	015 981 0805/015 981 0005 005 981 1505/005 981 1405

<b>SERIES ATEGO 1800</b>		<b>AXLE</b>
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32311	32311	010 981 9305/006 981 7405 006 981 6905/006 981 0805
FX 32312	32312	015 981 7505/011 981 6905 011 981 6805
FX 32314	32314	004 981 9805/012 981 3205 004 981 9905/005 981 0005
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX JH 415647/JH 415610	JH 415647/JH 415610	
FX 32020 X	32020 X	006 981 0405/001 981 6405 001 981 7205/004 981 7405
FX 33116	33116	017 981 4905/012 981 4105 012 981 4005

Fox Number	Bearing Number	Original Reference
<b>SERIES ATEGO 1800</b>		<b>AXLE</b>
FX 33220	33220	003 981 4505/004 981 1005 008 981 3405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105

<b>SERIES ATEGO 2500</b>		<b>AXLE</b>
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32311	32311	010 981 9305/006 981 7405 006 981 6905/006 981 0805
FX 32312	32312	015 981 7505/011 981 6905 011 981 6805
FX 32314	32314	004 981 9805/012 981 3205 004 981 9905/005 981 0005
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 32020 X	32020 X	006 981 0405/001 981 6405 001 981 7205/004 981 7405
FX 33116	33116	017 981 4905/012 981 4105 012 981 4005
FX 33220	33220	003 981 4505/004 981 1005 008 981 3405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33022	33022	004 981 0705/004 981 0905

Fox Number	Bearing Number	Original Reference
------------	----------------	--------------------

SERIES ATEGO 2600		AXLE
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32312	32312	015 981 7505/011 981 6905 011 981 6805
FX 32314	32314	004 981 9805/012 981 3205 004 981 9905/005 981 0005
FX 32020 X	32020 X	006 981 0405/001 981 6405 001 981 7205/004 981 7405
FX 33116	33116	017 981 4905/012 981 4105 012 981 4005
FX 33220	33220	003 981 4505/004 981 1005 008 981 3405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33022	33022	004 981 0705/004 981 0905

SERIES ATEGO 700		AXLE
FX 32306	32306	000 981 9505/001 981 8305 001 981 8705/006 981 5905 001 981 9505/312 981 0501
FX 33111	33111	000 980 7502/002 981 8205 006 981 8205/008 981 3605 000 981 8302
FX 33011	33011	002 981 9305/003 981 4305 005 981 4405/007 981 5705 009 981 9305

Fox Number	Bearing Number	Original Reference
<b>SERIES ATEGO 800</b>		<b>AXLE</b>
FX 32306	32306	000 981 9505/001 981 8305 001 981 8705/006 981 5905 001 981 9505/312 981 0501
FX 33111	33111	000 980 7502/002 981 8205 006 981 8205/008 981 3605 000 981 8302
FX 32018 X	32018 X	000720 032018/004 981 1705 005 981 5605/004 981 4305 006 981 0005
FX 33011	33011	002 981 9305/003 981 4305 005 981 4405/007 981 5705 009 981 9305
FX 33014	33014	005 981 6905
FX 33116	33116	017 981 4905/012 981 4105 012 981 4005
FX 33017	33017	006 981 8705/006 981 9705 007 981 4905
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 580/572	580/572	000 981 5605/002 981 0005 004 981 4605/004 981 4705 004 981 4805

<b>SERIES ATEGO 900</b>		<b>AXLE</b>
FX 32306	32306	000 981 9505/001 981 8305 001 981 8705/006 981 5905 001 981 9505/312 981 0501
FX 33208	33208	003 981 3905/003 981 7205 004 981 6805/006 981 6205 008 981 7505
FX 33017	33017	006 981 8705/006 981 9705 007 981 4905



Fox Number	Bearing Number	Original Reference
<b>SERIES ATEGO 900</b>		<b>AXLE</b>
FX 33111	33111	000 980 7502/002 981 8205 006 981 8205/008 981 3605 000 981 8302
FX 33213	33213	006 981 6305/001 980 0902 003 981 3705/003 981 7405
FX 32018 X	32018 X	000720 032018/004 981 1705 005 981 5605/004 981 4305 006 981 0005
FX 33011	33011	002 981 9305/003 981 4305 005 981 4405/007 981 5705 009 981 9305
FX 33014	33014	005 981 6905
FX 33116	33116	017 981 4905/012 981 4105 012 981 4005
FX 33017	33017	006 981 8705/006 981 9705 007 981 4905
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 580/572	580/572	000 981 5605/002 981 0005 004 981 4605/004 981 4705 004 981 4805

<b>SERIES BM 730</b>		<b>AXLE</b>
FX 32206	32206	001 981 1505/001 981 6105 007 981 7605
FX 32207	32207	319 981 0005
FX 32306	32306	000 981 9505/001 981 8305 001 981 8705/006 981 5905 001 981 9505/312 981 0501

Fox Number	Bearing Number	Original Reference
<b>SERIES BM 730</b>		<b>AXLE</b>
FX 33205	33205	140 981 0005/003 981 1005 003 981 1505/003 981 9505 005 981 2205
FX 33208	33208	003 981 3905/003 981 7205 004 981 6805/006 981 6205 008 981 7505
FX 33209	33209	003 981 5305/003 981 5705 004 981 7205/005 981 4105
FX 33210	33210	005 981 4005/002 981 7905 003 981 8305/004 981 4205
FX 1380/1328	1380/1328	000 981 5402/000 980 5002 000 980 5402/000 980 5502 124 981 0305
FX 32011 X	32011 X	000 981 9002/002 981 1305 002 981 6605/0006 981 5605 007 981 0405
FX 32304	32304	001 981 9005/002 981 2005 319 981 0605
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33109	33109	003 981 1105/003 981 1605 003 981 9605
FX 33111	33111	000 980 7502/002 981 8205 006 981 8205/008 981 3605 000 981 8302
FX 33211	33211	004 981 6405/004 981 6505 004 981 6705/006 981 6005
FX 33213	33213	006 981 6305/001 980 0902 003 981 3705/003 981 7405
FX 33214	33214	003 981 5205/003 981 5605
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
FX 2789/2720	2789/2720	002 981 2705/000 980 1402 002 981 2805

Fox Number	Bearing Number	Original Reference
------------	----------------	--------------------

SERIES BM 731		AXLE
FX 32017 X	32017 X	015 981 0805/015 981 0005 005 981 1505/005 981 1405
FX 32019 X	32019 X	003 981 5405/001 980 2602 002 981 5405/003 981 5105 006 981 4705
FX 33017	33017	006 981 8705/006 981 9705 007 981 4905
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105

SERIES BM 739		AXLE
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32311	32311	010 981 9305/006 981 7405 006 981 6905/006 981 0805
FX 32312	32312	015 981 7505/011 981 6905 011 981 6805
FX 33210	33210	005 981 4005/002 981 7905 003 981 8305/004 981 4205
FX 30314	30314	001 981 7705/001 981 7505
FX 32311	32311	010 981 9305/006 981 7405 006 981 6905/006 981 0805
FX 32314 B	32314 B	
FX JH 415647/JH 415610	JH 415647/JH 415610	

SERIES BM 740		AXLE
FX 30220	30220	004 981 2105/004 981 4905
FX 32011 X	32011 X	000 981 9002/002 981 1305 002 981 6605/0006 981 5605 007 981 0405

Fox Number	Bearing Number	Original Reference
<b>SERIES BM 740</b>		<b>AXLE</b>
FX 32019 X	32019 X	003 981 5405/001 980 2602 002 981 5405/003 981 5105 006 981 4705
FX 33208	33208	003 981 3905/003 981 7205 004 981 6805/006 981 6205 008 981 7505
FX 33220	33220	003 981 4505/004 981 1005 008 981 3405
FX 32014 X	32014 X	000720 032014/005 981 6605 005 981 9505/005 981 9805
FX 32021 X	32021 X	009 981 9401/003 981 2505
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105
FX 33213	33213	006 981 6305/001 980 0902 003 981 3705/003 981 7405

<b>SERIES BM 741</b>		<b>AXLE</b>
FX 32011 X	32011 X	000 981 9002/002 981 1305 002 981 6605/0006 981 5605 007 981 0405
FX 32014 X	32014 X	000720 032014/005 981 6605 005 981 9505/005 981 9805
FX 32210	32210	000 981 3605/001 981 8905 002 981 1905/002 981 2205 005 981 5305/319 981 0405
FX 33011	33011	002 981 9305/003 981 4305 005 981 4405/007 981 5705 009 981 9305
FX 33895/33820	33895/33820	002 981 0505/000 980 6802 001 981 0505/001 981 3805

Fox Number	Bearing Number	Original Reference
<b>SERIES BM 741</b>		<b>AXLE</b>
FX 32012 X	32012 X	007 981 1405
FX 32211	32211	000 981 3305/000 981 9005 001 981 8405/001 981 8605 002 981 2405/319 981 0205
FX 3984/3920	3984/3920	001 981 0405/001 981 3905 002 981 0605

<b>SERIES BM 742</b>		<b>AXLE</b>
FX 32011 X	32011 X	000 981 9002/002 981 1305 002 981 6605/0006 981 5605 007 981 0405
FX 33011	33011	002 981 9305/003 981 4305 005 981 4405/007 981 5705 009 981 9305
FX 33111	33111	000 980 7502/002 981 8205 006 981 8205/008 981 3605 000 981 8302
FX 33895/33820	33895/33820	002 981 0505/000 980 6802 001 981 0505/001 981 3805
FX 32014 X	32014 X	000720 032014/005 981 6605 005 981 9505/005 981 9805
FX 580/572	580/572	000 981 5605/002 981 0005 004 981 4605/004 981 4705 004 981 4805
FX 3984/3920	3984/3920	001 981 0405/001 981 3905 002 981 0605
FX 47490/47420	47490/47420	000 980 7202/000 980 7402
FX JM 714249/210	JM 714249/JM 714210	008 981 5305/003 981 4705

<b>SERIES BM 744</b>		<b>AXLE</b>
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702

Fox Number	Bearing Number	Original Reference
<b>SERIES BM 744</b>		<b>AXLE</b>
FX 32016 X	32016 X	007 981 9405/000720 032016 007 981 9005
FX 32216	32216	000 981 0305/000 981 2401 000 981 7205/000 981 9405 006 981 0605
FX 32217	32217	000 981 2205/002 981 1705 002 981 1805/327 981 0405 327 981 2205
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 580/572	580/572	000 981 5605/002 981 0005 004 981 4605/004 981 4705 004 981 4805

<b>SERIES BM 745</b>		<b>AXLE</b>
FX 32215	32215	000 981 7405/000 981 8405 001 981 4805/327 981 0305
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
FX 598/592 A	598/592 A	000 981 7905/001 981 4505
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105

Fox Number	Bearing Number	Original Reference
<b>SERIES BM 748</b>		<b>AXLE</b>
FX 30220	30220	004 981 2105/004 981 4905
FX 32019 X	32019 X	003 981 5405/001 980 2602 002 981 5405/003 981 5105 006 981 4705
FX 32020 X	32020 X	006 981 0405/001 981 6405 001 981 7205/004 981 7405
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33220	33220	003 981 4505/004 981 1005 008 981 3405
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105

<b>SERIES BM 749</b>		<b>AXLE</b>
FX 32019 X	32019 X	003 981 5405/001 980 2602 002 981 5405/003 981 5105
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32311	32311	010 981 9305/006 981 7405 006 981 6905/006 981 0805
FX 32312	32312	015 981 7505/011 981 6905 011 981 6805
FX 33116	33116	017 981 4905/012 981 4105 012 981 4005
FX 33210	33210	005 981 4005/002 981 7905 003 981 8305/004 981 4205
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
FX 30314	30314	001 981 7705/001 981 7505

Fox Number	Bearing Number	Original Reference
<b>SERIES BM 749</b>		<b>AXLE</b>
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405

<b>SERIES BM 749</b>		<b>AXLE</b>
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33217	33217	007 981 7005/011 981 0805

<b>SERIES BM 770</b>		<b>AXLE</b>
FX 32018 X	32018 X	000720 032018/004 981 1705 005 981 5605/004 981 4305 006 981 0005
FX 33014	33014	005 981 6905
FX 33116	33116	017 981 4905/012 981 4105 012 981 4005
FX 33017	33017	006 981 8705/006 981 9705 007 981 4905
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 580/572	580/572	000 981 5605/002 981 0005 004 981 4605/004 981 4705 004 981 4805

<b>SERIES O 32</b>		<b>GEAR CASE</b>
FX 30308	30308	
FX 30309	30309	006 981 4205/001 981 3705



Fox Number	Bearing Number	Original Reference
<b>SERIES O 32</b>		<b>STEERING</b>
FX 30205	30205	
FX 30206	30206	
<b>SERIES O 32</b>		<b>AXLE</b>
FX T 138	T 138	
FX 32307	32307	000 981 9605/001 981 5605 001 981 7005/003 981 6405 006 981 0705
FX 30312	30312	001 981 9705/000 981 8905 012 981 9705
FX 32212	32212	
FX 32213	32213	000 981 4105
FX 32214	32214	004 981 7305
FX 32216	32216	000 981 0305/000 981 2401 000 981 7205/000 981 9405 006 981 0605
<b>SERIES O 32</b>		<b>DIFFERENTIAL</b>
FX 32212	32212	
FX 32213	32213	000 981 4105
FX HM 911244/216	HM 911244/HM 911216	
<b>SERIES O 32</b>		<b>ENGINE</b>
FX 30302	30302	
<b>SERIES O 326</b>		<b>GEAR CASE</b>
FX 30308	30308	
<b>SERIES O 326</b>		<b>STEERING</b>
FX 30205	30205	
FX 30206	30206	

Fox Number	Bearing Number	Original Reference
<b>SERIES O 326</b>		<b>AXLE</b>
FX T 138	T 138	
FX T 144	T 144	
FX 32307	32307	000 981 9605/001 981 5605 001 981 7005/003 981 6405 006 981 0705
FX 30312	30312	001 981 9705/000 981 8905 012 981 9705
FX 559/552 A	559/552 A	
FX 32213	32213	000 981 4105
FX 33114	33114	
FX 32216	32216	000 981 0305/000 981 2401 000 981 7205/000 981 9405 006 981 0605
FX 598 A/593 X	598 A/593 X	
<b>SERIES O 326</b>		<b>DIFFERENTIAL</b>
FX 32213	32213	000 981 4105
FX 47487/47420 A	47487/47420 A	000 981 5705/002 981 1605
FX HM 911244/216	HM 911244/HM 911216	
<b>SERIES O 326</b>		<b>ENGINE</b>
FX 30203	30203	
FX 30204	30204	
FX 30205	30205	
<b>SERIES O 352</b>		<b>GEAR CASE</b>
FX 30308	30308	

Fox Number	Bearing Number	Original Reference
<b>SERIES O 352</b>		<b>STEERING</b>
FX 30205	30205	
FX 30206	30206	
<b>SERIES O 352</b>		<b>AXLE</b>
FX T 138	T 138	
FX 32307	32307	000 981 9605/001 981 5605 001 981 7005/003 981 6405 006 981 0705
FX 30312	30312	001 981 9705/000 981 8905 012 981 9705
FX 32213	32213	000 981 4105
FX 32216	32216	000 981 0305/000 981 2401 000 981 7205/000 981 9405 006 981 0605
<b>SERIES O 352</b>		<b>DIFFERENTIAL</b>
FX 32213	32213	000 981 4105
FX HM 911244/216	HM 911244/HM 911216	
<b>SERIES O 352</b>		<b>ENGINE</b>
FX 30203	30203	
FX 30204	30204	
<b>SERIES O 355-O 362</b>		<b>GEAR CASE</b>
FX 30308	30308	
<b>SERIES O 355-O 362</b>		<b>AXLE</b>
FX T 144	T 144	
FX 32307	32307	000 981 9605/001 981 5605 001 981 7005/003 981 6405 006 981 0705
FX 559/552 A	559/552 A	

Fox Number	Bearing Number	Original Reference
<b>SERIES O 355-O 362</b>		<b>AXLE</b>
FX 33114	33114	
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
FX 598 A/593 X	598 A/593 X	
<b>SERIES O 355-O 362</b>		<b>DIFFERENTIAL</b>
FX 47487/47420 A	47487/47420 A	000 981 5705/002 981 1605
FX HM 911244/216	HM 911244/HM 911216	
<b>SERIES O 355-O 362</b>		<b>ENGINE</b>
FX 30203	30203	
FX 30204	30204	
FX 30205	30205	
<b>SERIES O 364</b>		<b>GEAR CASE</b>
FX 30308	30308	
<b>SERIES O 364</b>		<b>AXLE</b>
FX T 144	T 144	
FX 32307	32307	000 981 9605/001 981 5605 001 981 7005/003 981 6405 006 981 0705
FX 559/552 A	559/552 A	
FX 33114	33114	
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405
FX 598 A/593 X	598 A/593 X	

Fox Number	Bearing Number	Original Reference
<b>SERIES O 364</b>		<b>DIFFERENTIAL</b>
FX 47487/47420 A	47487/47420 A	000 981 5705/002 981 1605
FX HM 911244/216	HM 911244/HM 911216	
<b>SERIES O 364</b>		<b>ENGINE</b>
FX 30203	30203	
FX 30204	30204	
FX 30205	30205	
<b>SERIES O 365</b>		<b>ENGINE</b>
FX 30203	30203	
FX 30204	30204	
FX 30205	30205	
<b>SERIES O 370-O 371</b>		<b>GEAR CASE</b>
FX 30308	30308	
FX 32309	32309	004 981 1305
<b>SERIES O 370-O 371</b>		<b>AXLE</b>
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 32019 X	32019 X	003 981 5405/001 980 2602 002 981 5405/003 981 5105 006 981 4705
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 33215	33215	002 981 8605/002 981 8905 001 980 2702
FX 33019	33019	000 980 9602/002 981 9005 003 981 8605/002 981 8405

Fox Number	Bearing Number	Original Reference
------------	----------------	--------------------

SERIES O 370-O 371		AXLE
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33022	33022	004 981 0705/004 981 0905 005 981 2105

SERIES O 370-O 371		DIFFERENTIAL
FX 31313	31313	
FX 32018 X	32018 X	000720 032018/004 981 1705 005 981 5605/004 981 4305 006 981 0005
FX 33115	33115	003 981 3205
FX 47487/47420 A	47487/47420 A	000 981 5705/002 981 1605
FX HM 911244/216	HM 911244/HM 911216	

SERIES O 400		GEAR CASE
FX 32309	32309	004 981 1305

SERIES O 400		AXLE
FX 32310	32310	001 981 7605/000 981 2005 001 981 2905/001 981 7405 001 981 8202/006 981 9905
FX 33021	33021	000 980 9702/003 981 2605 003 981 2805/005 981 4905
FX 33117	33117	001 980 6702/005 981 8305 005 981 8605/005 981 9905
FX 32019 X	32019 X	003 981 5405/001 980 2602 002 981 5405/003 981 5105 006 981 4705
FX 33020	33020	001 980 6602/005 981 8405 005 981 8505/006 981 0105

Fox Number	Bearing Number	Original Reference
<b>SERIES O 400</b>		<b>DIFFERENTIAL</b>
FX 31313	31313	
FX 32018 X	32018 X	000720 032018/004 981 1705 005 981 5605/004 981 4305 006 981 0005
FX 33115	33115	003 981 3205