

Fox Number	Bearing Number	Original Reference
AVAILABLE BEARINGS FOR VOLVO APPLICATIONS		
FX 218248/10	218248/10	1698580/183351
FX 220149/10	220149/10	
FX 30207 A	30207 A	
FX 30214	30214	
FX 30217	30217	1652119
FX 30306	30306	
FX 31308	31308	
FX 31312	31312	
FX 31315	31315	
FX 31316	31316	
FX 32015 X	32015 X	184068
FX 32017 X/A	32017 X/A	
FX 32206	32206	183583
FX 32207	32207	183684
FX 32208	32208	183763
FX 32209	32209	184593/7011137/11137 183764
FX 32210	32210	11099/183765
FX 32211	32211	183769
FX 32213	32213	11076
FX 32219	32219	181086
FX 32308	32308	11074/181668/181669
FX 32309	32309	
FX 32310	32310	11062
FX 32312	32312	1699340

Fox Number	Bearing Number	Original Reference
AVAILABLE BEARINGS FOR VOLVO APPLICATIONS		
FX 33012	33012	183777
FX 33013	33013	183766
FX 33014	33014	183778
FX 33015	33015	183667/183767
FX 33018	33018	183768
FX 33110	33110	
FX 33115	33115	184678
FX 33207	33207	183648
FX 33208	33208	1652127/184679
FX 33212	33212	
FX 33213	33213	184672
FX 33217	33217	1699339
FX 33889/33822	33889/33822	
FX 3581/3525	3581/3525	
FX 39580/39520	39580/39520	20428192/184088/815820
FX 39590/39520	39590/39520	183245
FX 42687/42620	42687/42620	181002/181001
FX 47687/47620	47687/47620	
FX 53178/53377	53178/53377	
FX 537/532	537/532	
FX 537/532 X	537/532 X	181402/181338 E/181338
FX 538971	538971	1584340/8151816
FX 539090M	539090M	
FX 543805	543805	1588222
FX 580/572	580/572	181125/181299

Fox Number	Bearing Number	Original Reference
AVAILABLE BEARINGS FOR VOLVO APPLICATIONS		
FX 581079	581079	
FX 594/592 A	594/592 A	183704/181298/181128 191298
FX 6006 2RS	6006 2RS	
FX 621/612	621/612	181352/181356/181546
FX 6305	6305	
FX 6306 ZZ	6306 ZZ	
FX 6386/6320	6386/6320	181346/181337
FX 663/653	663/653	181281/181280/184794
FX 683/672	683/672	184795/181279/181278
FX 687/672	687/672	184637/181596/181279
FX 687/682	687/682	
FX 749 A/742	749 A/742	181340/181664
FX 800972	800972	
FX 9285/9220	9285/9220	
FX BT1B0097C	BT1B0097C	
FX H 913842/H 913810	H 913842/H 913810	
FX H 913843/H 913810	H 913843/H 913810	
FX HM 212044/010	HM 212044/HM 212010	
FX HM 215249/210	HM 215249/HM 215210	183348
FX HM 218248/210	HM 218248/HM 218210	1698580
FX HM 220149/110	HM 220149/HM 220110	
FX HM 911245/210	HM 911245/HM 911210	
FX J 7049 A/J 7010	J 7049 A/J 7010	
FX JM 205149/110	JM 205149/JM 205110	183813/183812

Fox Number	Bearing Number	Original Reference
AVAILABLE BEARINGS FOR VOLVO APPLICATIONS		
FX JM 207049/010	JM 207049/JM 207010	183817
FX KHM 215249/210	KHM215249.HM215210	
FX KJLM 104948/910	KJLM104948.JLM104910	
FX NJ306E.JP1.C3	NJ306E.JP1.C3	
FX NU311ENR.JP1.C3	NU311ENR.JP1.C3	
FX NUP309VH.C3	NUP309VH.C3	
FX RNU2307E.M1	RNU2307E.M1	
FX T2ED070	T2ED070	8151816

Fox Number	Bearing Number	Original Reference
MODEL B 10M BR		GEAR CASE
FX 32309	32309	
MODEL B 10M BR		AXLE
FX 53178/53377	53178/53377	
FX 39580/39520	39580/39520	20428192/184088/815820
FX J 7049 A/J 7010	J 7049 A/J 7010	
FX 663/653	663/653	181281/181280/184794
FX 683/672	683/672	184795/181279/181278
MODEL B 10M BR		DIFFERENTIAL
FX 687/672	687/672	184637/181596/181279
FX 9285/9220	9285/9220	
FX HM 911245/210	HM 911245/HM 911210	
FX H 913842/H 913810	H 913842/H 913810	
FX H 913843/H 913810	H 913843/H 913810	
MODEL B 10M BR		ENGINE
FX 32213	32213	11076
MODEL B 58 BR		GEAR CASE
FX 32309	32309	
FX 33889/33822	33889/33822	
MODEL B 58 BR		AXLE
FX 53178/53377	53178/53377	
FX 537/532 X	537/532 X	181402/181338 E/181338
FX 6386/6320	6386/6320	181346/181337
FX 32219	32219	181086

Fox Number	Bearing Number	Original Reference
MODEL B 58 BR		AXLE
FX 663/653	663/653	181281/181280/184794
FX 683/672	683/672	184795/181279/181278
FX J 7049 A/J 7010	J 7049 A/J 7010	
MODEL B 58 BR		DIFFERENTIAL
FX 594/592 A	594/592 A	183704/181298/181128 191298
FX 687/672	687/672	184637/181596/181279
FX 9285/9220	9285/9220	
FX HM 911245/210	HM 911245/HM 911210	
FX H 913842/H 913810	H 913842/H 913810	
FX H 913843/H 913810	H 913843/H 913810	
MODEL B 58 BR		ENGINE
FX 30306	30306	
FX 32213	32213	11076
MODEL B 58		GEAR CASE
FX 32309	32309	
MODEL B 58		AXLE
FX 53178/53377	53178/53377	
FX 537/532 X	537/532 X	181402/181338 E/181338
FX 6386/6320	6386/6320	181346/181337
FX 32219	32219	181086
FX J 7049 A/J 7010	J 7049 A/J 7010	
MODEL B 58		DIFFERENTIAL
FX 594/592 A	594/592 A	183704/181298/181128 191298

Fox Number	Bearing Number	Original Reference
MODEL B 58		DIFFERENTIAL
FX 687/672	687/672	184637/181596/181279
FX 9285/9220	9285/9220	
FX HM 911245/210	HM 911245/HM 911210	
FX H 913842/H 913810	H 913842/H 913810	
FX H 913843/H 913810	H 913843/H 913810	
MODEL B 58		ENGINE
FX 30306	30306	
FX 32213	32213	11076
MODEL F 10		AXLE
FX 537/532 X	537/532 X	181402/181338 E/181338
FX 39580/39520	39580/39520	20428192/184088/815820
FX 6386/6320	6386/6320	181346/181337
FX 32219	32219	181086
FX 33213	33213	184672
FX 580/572	580/572	181125/181299
FX 663/653	663/653	181281/181280/184794
FX 749 A/742	749 A/742	181340/181664
FX HM 218248/210	HM 218248/HM 218210	1698580
FX 594/592 A	594/592 A	183704/181298/181128 191298
FX 683/672	683/672	184795/181279/181278
FX HM 215249/210	HM 215249/HM 215210	183348
FX HM 220149/110	HM 220149/HM 220110	

Fox Number	Bearing Number	Original Reference
MODEL F 12		AXLE
FX 537/532 X	537/532 X	181402/181338 E/181338
FX 39580/39520	39580/39520	20428192/184088/815820
FX 6386/6320	6386/6320	181346/181337
FX 32219	32219	181086
FX 33213	33213	184672
FX 580/572	580/572	181125/181299
FX 663/653	663/653	181281/181280/184794
FX 749 A/742	749 A/742	181340/181664
FX HM 218248/210	HM 218248/HM 218210	1698580
FX 594/592 A	594/592 A	183704/181298/181128 191298
FX 683/672	683/672	184795/181279/181278
FX HM 215249/210	HM 215249/HM 215210	183348
FX HM 218248/210	HM 218248/HM 218210	1698580
FX HM 220149/110	HM 220149/HM 220110	

MODEL F 16		AXLE
FX 39580/39520	39580/39520	20428192/184088/815820
FX 663/653	663/653	181281/181280/184794
FX 749 A/742	749 A/742	181340/181664
FX HM 218248/210	HM 218248/HM 218210	1698580
FX 683/672	683/672	184795/181279/181278
FX HM 220149/110	HM 220149/HM 220110	

MODEL F 406-F 407-F 408		AXLE
FX 32206	32206	183583

Fox Number	Bearing Number	Original Reference
MODEL F 406-F 407-F 408		AXLE
FX 32207	32207	183684
FX 32209	32209	184593/7011137/11137 183764
FX 32210	32210	11099/183765
FX 33012	33012	183777
FX 33014	33014	183778

MODEL F 607-F 608-F 609-F 610		AXLE
FX 32207	32207	183684
FX 32210	32210	11099/183765
FX 33013	33013	183766
FX 33015	33015	183667/183767

MODEL F 611-F 612-F 613-F 614		AXLE
FX 32208	32208	183763
FX 32211	32211	183769
FX JM 207049/010	JM 207049/JM 207010	183817
FX 33015	33015	183667/183767
FX 33018	33018	183768

MODEL F 615-F 616-F 617		AXLE
FX 537/532 X	537/532 X	181402/181338 E/181338
FX 39580/39520	39580/39520	20428192/184088/815820
FX JM 205149/110	JM 205149/JM 205110	183813/183812
FX 6386/6320	6386/6320	181346/181337
FX HM 212044/010	HM 212044/HM 212010	

Fox Number	Bearing Number	Original Reference
MODEL F 615-F 616-F 617		AXLE
FX 580/572	580/572	181125/181299
FX 594/592 A	594/592 A	183704/181298/181128 191298

MODEL F 7		AXLE
FX 537/532 X	537/532 X	181402/181338 E/181338
FX 663/653	663/653	181281/181280/184794
FX 39580/39520	39580/39520	20428192/184088/815820
FX 683/672	683/672	184795/181279/181278
FX 6386/6320	6386/6320	181346/181337
FX 580/572	580/572	181125/181299
FX 594/592 A	594/592 A	183704/181298/181128 191298
FX HM 215249/210	HM 215249/HM 215210	183348

MODEL F 84-F 85		AXLE
FX 32308	32308	11074/181668/181669
FX 3581/3525	3581/3525	
FX 621/612	621/612	181352/181356/181546
FX 580/572	580/572	181125/181299
FX 42687/42620	42687/42620	181002/181001
FX 594/592 A	594/592 A	183704/181298/181128 191298

MODEL F 86-F 87		AXLE
FX 32308	32308	11074/181668/181669
FX 537/532 X	537/532 X	181402/181338 E/181338

Fox Number	Bearing Number	Original Reference
MODEL F 86-F 87		AXLE
FX 6386/6320	6386/6320	181346/181337
FX 580/572	580/572	181125/181299
FX 663/653	663/653	181281/181280/184794
FX 594/592 A	594/592 A	183704/181298/181128 191298
FX 683/672	683/672	184795/181279/181278

MODEL F 88-F 89		AXLE
FX 537/532 X	537/532 X	181402/181338 E/181338
FX 6386/6320	6386/6320	181346/181337
FX 32219	32219	181086
FX 580/572	580/572	181125/181299
FX 663/653	663/653	181281/181280/184794
FX 594/592 A	594/592 A	183704/181298/181128 191298
FX 683/672	683/672	184795/181279/181278

MODEL FB 86		AXLE
FX 537/532 X	537/532 X	181402/181338 E/181338
FX 6386/6320	6386/6320	181346/181337
FX 580/572	580/572	181125/181299
FX 663/653	663/653	181281/181280/184794
FX 594/592 A	594/592 A	183704/181298/181128 191298
FX 683/672	683/672	184795/181279/181278

Fox Number	Bearing Number	Original Reference
MODEL FB 88		AXLE
FX 537/532 X	537/532 X	181402/181338 E/181338
FX 6386/6320	6386/6320	181346/181337
FX 32219	32219	181086
FX 663/653	663/653	181281/181280/184794
FX 683/672	683/672	184795/181279/181278
MODEL FH 12		GEAR CASE
FX 33212	33212	1652563
MODEL FH 12		AXLE
FX 39580/39520	39580/39520	20428192/184088/815820
FX 663/653	663/653	181281/181280/184794
FX HM 218248/210	HM 218248/HM 218210	1698580
FX 683/672	683/672	184795/181279/181278
FX HM 220149/110	HM 220149/HM 220110	
MODEL FH 12		DIFFERENTIAL
FX 30217	30217	1652119
FX 31312	31312	
FX 31315	31315	
FX 594/592 A	594/592 A	183704/181298/181128 191298
FX 687/682	687/682	
FX HM 911245/210	HM 911245/HM 911210	
FX H 913843/H 913810	H 913843/H 913810	

Fox Number	Bearing Number	Original Reference
MODEL FH 16		AXLE
FX 39580/39520	39580/39520	20428192/184088/815820
FX 663/653	663/653	181281/181280/184794
FX HM 218248/210	HM 218248/HM 218210	1698580
FX 683/672	683/672	184795/181279/181278
FX HM 220149/110	HM 220149/HM 220110	

MODEL FL 10		AXLE
FX 32312	32312	1699340
FX 663/653	663/653	181281/181280/184794
FX 39580/39520	39580/39520	20428192/184088/815820
FX 33217	33217	1699339
FX 683/672	683/672	184795/181279/181278
FX HM 218248/210	HM 218248/HM 218210	1698580
FX HM 220149/110	HM 220149/HM 220110	

MODEL FL 12		AXLE
FX 663/653	663/653	181281/181280/184794
FX 39580/39520	39580/39520	20428192/184088/815820
FX 683/672	683/672	184795/181279/181278

MODEL FL 4		AXLE
FX 33207	33207	183648
FX 33012	33012	183777
FX 33014	33014	183778

Fox Number	Bearing Number	Original Reference
MODEL FL 6		AXLE
FX 33207	33207	183648
FX 663/653	663/653	181281/181280/184794
FX 683/672	683/672	184795/181279/181278

MODEL FL 608		AXLE
FX 33207	33207	183648
FX 33208	33208	1652127/184679
FX 39590/39520	39590/39520	183245
FX 47687/47620	47687/47620	

MODEL FL 612		AXLE
FX 33207	33207	183648
FX 33208	33208	1652127/184679
FX 33115	33115	184678
FX 33018	33018	183768
FX 39590/39520	39590/39520	183245
FX 47687/47620	47687/47620	

MODEL FL 616		AXLE
FX 39590/39520	39590/39520	183245
FX 580/572	580/572	181125/181299
FX 594/592 A	594/592 A	183704/181298/181128 191298

MODEL FL 618		AXLE
FX 580/572	580/572	181125/181299

Fox Number	Bearing Number	Original Reference
MODEL FL 618		AXLE
FX 663/653	663/653	181281/181280/184794
FX 594/592 A	594/592 A	183704/181298/181128 191298
FX 683/672	683/672	184795/181279/181278

MODEL FL 7		AXLE
FX 663/653	663/653	181281/181280/184794
FX 39580/39520	39580/39520	20428192/184088/815820
FX 683/672	683/672	184795/181279/181278
FX 39590/39520	39590/39520	183245
FX HM 218248/210	HM 218248/HM 218210	1698580
FX HM 220149/110	HM 220149/HM 220110	

MODEL FL 615		AXLE
FX 33208	33208	1652127/184679
FX 33115	33115	184678
FX 47687/47620	47687/47620	

MODEL FL 617		AXLE
FX 580/572	580/572	181125/181299
FX 594/592 A	594/592 A	183704/181298/181128 191298

MODEL FL 626		AXLE
FX 39590/39520	39590/39520	183245
FX 580/572	580/572	181125/181299

Fox Number	Bearing Number	Original Reference
MODEL FL 626		AXLE
FX 594/592 A	594/592 A	183704/181298/181128 191298

MODEL FL 619		AXLE
FX 580/572	580/572	181125/181299
FX 594/592 A	594/592 A	183704/181298/181128 191298

MODEL FS 10		AXLE
FX 39590/39520	39590/39520	183245
FX 663/653	663/653	181281/181280/184794
FX HM 218248/210	HM 218248/HM 218210	1698580
FX 683/672	683/672	184795/181279/181278
FX HM 220149/110	HM 220149/HM 220110	

MODEL FS 7		AXLE
FX 39590/39520	39590/39520	183245
FX 580/572	580/572	181125/181299
FX 663/653	663/653	181281/181280/184794
FX 594/592 A	594/592 A	183704/181298/181128 191298
FX 683/672	683/672	184795/181279/181278

MODEL G 88		AXLE
FX 537/532 X	537/532 X	181402/181338 E/181338
FX 6386/6320	6386/6320	181346/181337
FX 32219	32219	181086

Fox Number	Bearing Number	Original Reference
MODEL G 88		AXLE
FX 580/572	580/572	181125/181299
FX 663/653	663/653	181281/181280/184794
FX 594/592 A	594/592 A	183704/181298/181128 191298
FX 683/672	683/672	184795/181279/181278

MODEL G 89		AXLE
FX 537/532 X	537/532 X	181402/181338 E/181338
FX 6386/6320	6386/6320	181346/181337
FX 32219	32219	181086
FX 580/572	580/572	181125/181299
FX 663/653	663/653	181281/181280/184794
FX 594/592 A	594/592 A	183704/181298/181128 191298
FX 683/672	683/672	184795/181279/181278

MODEL N 10 BR - NL 10 BR		GEAR CASE
FX 32310	32310	11062
FX 33110	33110	
FX 31308	31308	

MODEL N 10 BR - NL 10 BR		AXLE
FX 31308	31308	
FX 53178/53377	53178/53377	
FX 32308	32308	11074/181668/181669
FX 33208	33208	1652127/184679
FX 537/532	537/532	

Fox Number	Bearing Number	Original Reference
MODEL N 10 BR - NL 10 BR		AXLE
FX 537/532 X	537/532 X	181402/181338 E/181338
FX 39580/39520	39580/39520	20428192/184088/815820
FX 6386/6320	6386/6320	181346/181337
FX J 7049 A/J 7010	J 7049 A/J 7010	
FX 32017 X/A	32017 X/A	
FX 32219	32219	181086
FX 580/572	580/572	181125/181299
FX 663/653	663/653	181281/181280/184794
FX 749 A/742	749 A/742	181340/181664
FX HM 218248/210	HM 218248/HM 218210	1698580
FX HM 220149/110	HM 220149/HM 220110	
FX 594/592 A	594/592 A	183704/181298/181128 191298
FX 683/672	683/672	184795/181279/181278
MODEL N 10 BR - NL 10 BR		DIFFERENTIAL
FX 30214	30214	
FX 30217	30217	1652119
FX 31312	31312	
FX 31315	31315	
FX 31316	31316	
FX 32015 X	32015 X	184068
FX 32017 X/A	32017 X/A	
FX 594/592 A	594/592 A	183704/181298/181128 191298
FX 687/672	687/672	184637/181596/181279
FX 9285/9220	9285/9220	

Fox Number	Bearing Number	Original Reference
MODEL N 10 BR - NL 10 BR		DIFFERENTIAL
FX HM 911245/210	HM 911245/HM 911210	
FX H 913842/H 913810	H 913842/H 913810	
FX H 913843/H 913810	H 913843/H 913810	
MODEL N 12 BR - NL 12 BR		GEAR CASE
FX 32310	32310	11062
MODEL N 12 BR - NL 12 BR		AXLE
FX 31308	31308	
FX 53178/53377	53178/53377	
FX 32308	32308	11074/181668/181669
FX 33208	33208	1652127/184679
FX 537/532 X	537/532 X	181402/181338 E/181338
FX 39580/39520	39580/39520	20428192/184088/815820
FX 6386/6320	6386/6320	181346/181337
FX 32219	32219	181086
FX 580/572	580/572	181125/181299
FX 663/653	663/653	181281/181280/184794
FX 749 A/742	749 A/742	181340/181664
FX HM 218248/210	HM 218248/HM 218210	1698580
FX HM 220149/110	HM 220149/HM 220110	
FX 594/592 A	594/592 A	183704/181298/181128 191298
FX 683/672	683/672	184795/181279/181278
FX J 7049 A/J 7010	J 7049 A/J 7010	

Fox Number	Bearing Number	Original Reference
MODEL N 12 BR - NL 12 BR		DIFFERENTIAL
FX 30214	30214	
FX 30217	30217	1652119
FX 31312	31312	
FX 31315	31315	
FX 31316	31316	
FX 32015 X	32015 X	184068
FX 32017 X/A	32017 X/A	
FX 594/592 A	594/592 A	183704/181298/181128 191298
FX 687/672	687/672	184637/181596/181279
FX HM 911245/210	HM 911245/HM 911210	
FX H 913843/H 913810	H 913843/H 913810	

MODEL N 7		AXLE
FX 32308	32308	11074/181668/181669
FX 537/532 X	537/532 X	181402/181338 E/181338
FX 39580/39520	39580/39520	20428192/184088/815820
FX 6386/6320	6386/6320	181346/181337
FX 580/572	580/572	181125/181299
FX 663/653	663/653	181281/181280/184794
FX 594/592 A	594/592 A	183704/181298/181128 191298
FX 683/672	683/672	184795/181279/181278

MODEL N 84		AXLE
FX 3581/3525	3581/3525	

Fox Number	Bearing Number	Original Reference
MODEL N 84		AXLE
FX 621/612	621/612	181352/181356/181546
FX 580/572	580/572	181125/181299
FX 42687/42620	42687/42620	181002/181001
FX 594/592 A	594/592 A	183704/181298/181128 191298

MODEL N 86		AXLE
FX 32308	32308	11074/181668/181669
FX 537/532 X	537/532 X	181402/181338 E/181338
FX 6386/6320	6386/6320	181346/181337
FX 580/572	580/572	181125/181299
FX 663/653	663/653	181281/181280/184794
FX 594/592 A	594/592 A	183704/181298/181128 191298
FX 683/672	683/672	184795/181279/181278

MODEL N 88		AXLE
FX 32308	32308	11074/181668/181669
FX 537/532 X	537/532 X	181402/181338 E/181338
FX 6386/6320	6386/6320	181346/181337
FX 32219	32219	181086
FX 663/653	663/653	181281/181280/184794
FX 683/672	683/672	184795/181279/181278

MODEL NB 86		AXLE
FX 32308	32308	11074/181668/181669

Fox Number	Bearing Number	Original Reference
MODEL NB 86		AXLE
FX 537/532 X	537/532 X	181402/181338 E/181338
FX 6386/6320	6386/6320	181346/181337
FX 663/653	663/653	181281/181280/184794
FX 683/672	683/672	184795/181279/181278

MODEL NB 88		AXLE
FX 32308	32308	11074/181668/181669
FX 537/532 X	537/532 X	181402/181338 E/181338
FX 6386/6320	6386/6320	181346/181337
FX 32219	32219	181086
FX 580/572	580/572	181125/181299
FX 663/653	663/653	181281/181280/184794
FX 594/592 A	594/592 A	183704/181298/181128 191298
FX 683/672	683/672	184795/181279/181278

MODEL NL 10		AXLE
FX 32312	32312	1699340
FX 39580/39520	39580/39520	20428192/184088/815820
FX 33217	33217	1699339
FX 663/653	663/653	181281/181280/184794
FX 749 A/742	749 A/742	181340/181664
FX 683/672	683/672	184795/181279/181278

MODEL NL 12		AXLE
FX 39580/39520	39580/39520	20428192/184088/815820

Fox Number	Bearing Number	Original Reference
MODEL NL 12		AXLE
FX 663/653	663/653	181281/181280/184794
FX 749 A/742	749 A/742	181340/181664
FX HM 218248/210	HM 218248/HM 218210	1698580
FX 683/672	683/672	184795/181279/181278
FX HM 220149/110	HM 220149/HM 220110	